OPERATING AND MAINTENANCE MANUAL

KROHN-HITE CORPORATION
580 Massachusetts Ave., Cambridge, Mass. 02139 U.S.A.

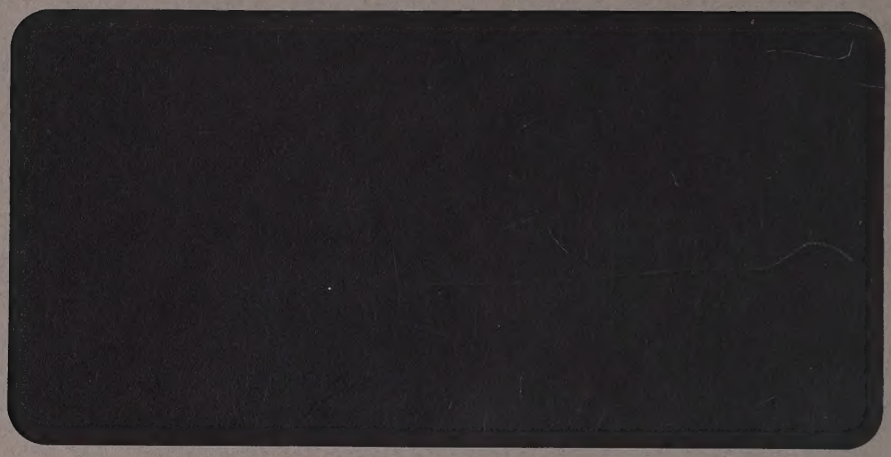

Service and Warranty

KROHN-HITE Instruments are designed and manufactured in accordance with sound engineering practices and should give long trouble-free service under normal operating conditions. If your Instrument fails to provide satisfactory service and you are unable to locate the source of trouble, contact our Representative if there is one in your area or write to our Service Department giving all the information available concerning the failure.

Do not return the instrument without our written authorization for, in most cases, we will be able to supply you with the information necessary to repair the instrument and thus avoid the transportation problems and costs. When it becomes necessary to return the instrument to our Factory, kindly pack it carefully and ship it to us via Railway Express, prepaid.

KROHN-HITE Instruments are conservatively designed to provide continuous reliable service under normal laboratory conditions. The material and workmanship in every new instrument manufactured by Krohn-Hite is guaranteed for one year from the date of shipment to the original purchaser. Any instrument developing defects during this period will be repaired or replaced without charge when the failure is the result of defective material or workmanship. This warranty does not apply to electron tubes, fuses, batteries, transistors and other semiconductor devices.

KROHN-HITE CORPORATION reserves the right to make design changes at any time without incurring any obligation to incorporate these changes in instruments previously purchased.

SOLID STATE

PUSH BUTTON

OSCILLATOR

MODEL 4100(R) SERIAL NO. 430

OPERATING AND MAINTENANCE MANUAL

KROHN-HITE CORPORATION

580 Massachusetts Ave., Cambridge, Mass. 02139 U.S.A.

CONTENTS

Section		Page
1	GENERAL DESCRIPTION	1
2	OPERATING INSTRUCTIONS	5
3	CIRCUIT DESCRIPTION	8
4	MAINTENANCE	12
5	CALIBRATION AND ADJUSTMENT	21

ILLUSTRATIONS

Figure		Page
1	Models 4100 and 4100R Oscillator	ii
2	Simplified Schematic Diagram	8
3	Exposed Top View of Oscillator	13
4	Circuit for External Signal Application	14
5	Charge Amplifier Output Signal	17
6	AVC Amplifier Output Signal at 100 Hz	22
7	AVC Amplifier Output Signal at 9 Hz	23
8	Push-Button Printed Circuit Cards	27
9	Schematic Diagram	inside back cover

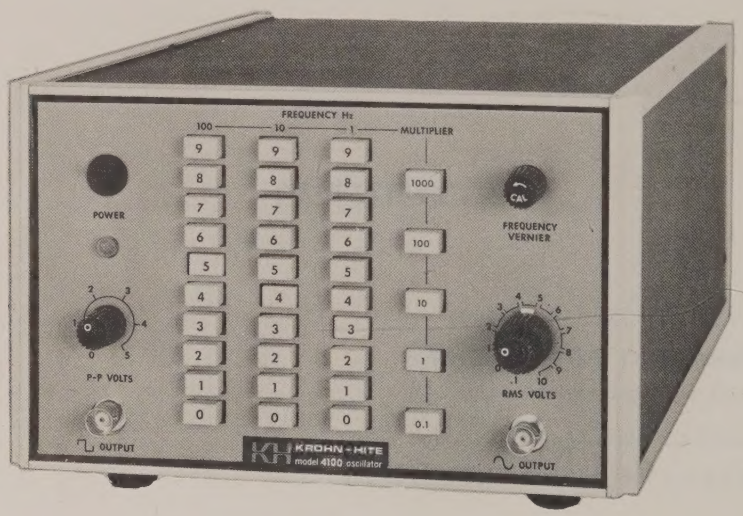

Model 4100

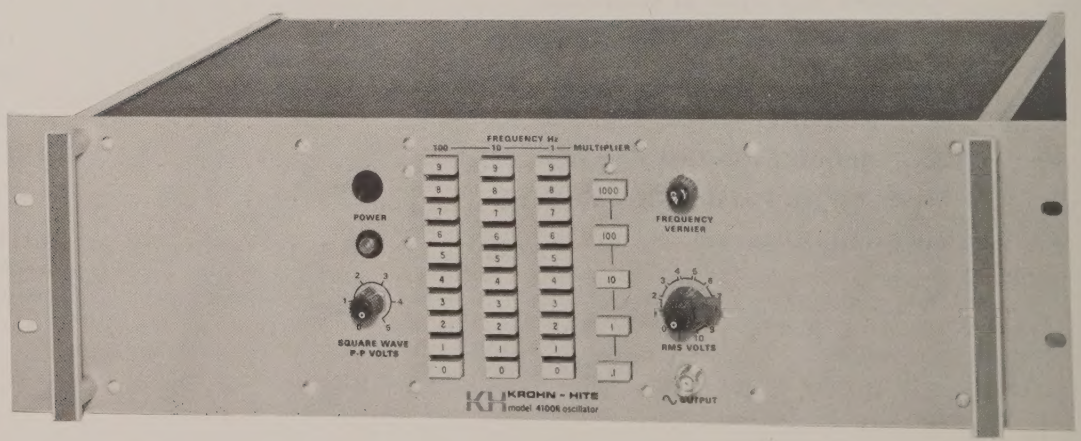

Model 4100R

Figure 1. Models 4100 and 4100R Oscillator

SECTION 1

GENERAL DESCRIPTION

1.1 INTRODUCTION

This manual provides operation and maintenance instructions, with detailed specifications, schematic diagram and parts list, for the Model 4100 Push-Button Oscillator, illustrated in Figure 1. When the suffix "R" is added to the model number the Oscillator is provided with a front panel suitable for standard rack mounting, and is identical to the bench model in operation and performance.

Reference to Operating Instructions, Section 2, is recommended before this Oscillator is put into operation. In the event the Oscillator is not functioning or fails to meet performance specifications, reference should be made to Maintenance, Section 4. However, before doing any troubleshooting it should be determined if the normal adjustments mentioned in the Calibration and Adjustment procedure, Section 5, will correct the trouble.

1.2 DESCRIPTION

The Model 4100 is an all silicon, solid state, general purpose Oscillator that provides sine and square waves simultaneously from 0.01 Hz to 1 MHz. It operates from an ac source of 115 or 230 volts, 50-400 Hz.

Sine wave output is variable from 0 to 10 volts rms open-circuit or 5 volts rms across 50 ohms. Maximum power output is 1/2 watt with less than 0.02% harmonic distortion. The independent square wave output is variable from 0 to 5 volts peak-to-peak and its risetime is less than 20 nano-seconds.

1.3 TECHNICAL SUMMARY

Frequency Range

0.01 Hz to 1 MHz continuously variable.

MULTIPLIER	FREQUENCY (Hz)	VERNIER RANGE (Hz)
0.1	0.01 - 99.9	0.1
1	100 - 999	1
10	1,000 - 9,990	10
100	10,000 - 99,900	100
1000	100,000 - 999,000	1000

Frequency Control

Three pushbutton decades for frequency digits, one five position pushbutton switch for multiplier. Frequency vernier is used to cover the range from 0.01 Hz to 0.1 Hz and the interval between digits of the third pushbutton decade.

Frequency Calibration Accuracy

±0.5% from 10 Hz to 100 kHz, rising to ±2% at 0.1 Hz and 1 MHz, with vernier in off position.

Frequency Stability

Vs. Time: In any period of 1 hour or less, within ±0.01% from 10Hz to 99.9kHz and ±0.1% from 0.1 Hz to 1 MHz. In any period of 10 hours or less, within ±0.05% from 10 Hz to 99.9 kHz and ±0.3% from 0.1 Hz to 1 MHz.

Vs. Line: For a 10% change in line voltage, within ±0.002% from 10 Hz to 99.9 kHz, rising to ±0.01% at 0.1 Hz and 1 MHz.

Vs. Load: No load to full load, within ±0.01% from 1 Hz to 10 kHz rising to ±0.06% at 0.1 Hz and ±0.6% at 1 MHz.

Vs. Temperature: Within ±0.02% per degree C from 10 Hz to 99.9 kHz and ±0.1% per degree C from 0.1 Hz to 1 MHz.

External Synchronization

A 1.5 volt peak-to-peak external signal will lock Oscillator over a range of approximately ±0.5%. See Section 2.3.

Sine Wave Output

Power: 1/2 watt.

Voltage: 10 volts rms open circuit, 5 volts across 50 ohms.

Current: 100 milliamperes rms.

Impedance: Constant 50 ohms ±2%.

DC Component: Nominal zero volts. At maximum output, drift is less than 2 millivolt per degree C, less than 1 millivolt for a 10% line voltage change, and within ±5 millivolts in any period of 10 hours or less. Drift reduced in proportion to output signal.

Distortion: Less than 0.02% from 10 Hz to 50 kHz, rising to 0.1% at 0.5 Hz and 99.9 kHz and to 1% at 1 MHz.

Amplitude Stability

Vs. Time: In any period of one hour or less, within ±0.01% from 10 Hz to 20 kHz, rising to ±0.05% at 1 MHz. In any period of 10 hours or less, within ±0.02% from 10 Hz to 20 kHz, rising to ±0.1% at 1 MHz.

Vs. Line: For a 10% change in line voltage, within ±0.01% from 10 Hz to 1 MHz.

Vs. Temperature: Within ±0.01% per degree C from 10 Hz to 20 kHz, rising to ±0.1% per degree C at 1 MHz.

Hum and Noise: Less than 0.01% of output.

Cycle-to-Cycle Amplitude Stability: Less than 0.02%.

Frequency Response: Within ±0.05 db from 10 Hz to 10 kHz, rising to ±0.3 db at 0.1 Hz and 1 MHz.

Amplitude Control: Eleven position switch providing ten 1-volt increments from zero to 9 inclusive. In the first position (0 - 0.1) the concentric infinite-resolution vernier provides continuous control from near zero (approximately 2 millivolts) to a nominal 100 millivolts. In the next ten positions this vernier covers a nominal 1-volt range. At no load with vernier control at maximum CCW position, calibration is within ±2% ±2 millivolts of indicated attenuator setting for frequencies up to 20 kHz, rising to ±5% ±20 millivolts at 1 MHz.

Tuning Transients: Typical deviation after switching, over most of the range, less than ±0.5 db recovering within 10 milliseconds or a few cycles, whichever is greater.

Square Wave Output

Voltage: Continuously adjustable from nominal zero to 5 volts peak-to-peak open circuit, 2.5 volts across 50 ohms.

Current: 100 milliamperes peak-to-peak.

Impedance: Constant 50 ohms.

DC Component: Nominal zero volts.

Waveform Details: Rise and fall time, less than 20 nanoseconds; symmetrical within ±2%; flat top with no droop and less than 5% overshoot at maximum amplitude.

Floating (ungrounded) Operation

A switch is provided to disconnect the signal ground from chassis ground. In this mode performance is slightly reduced above 10 kHz.

Terminals: BNC connectors on both front panel and rear of chassis for sine wave output. BNC connector on front panel only of Bench Model 4100, and rear at chassis only for Rack Model 4100R.

Power Requirements

105-125 or 210-250 volts, single phase, 50-400 Hz, 30 watts.

Ambient Temperature Range

0°C to 50°C.

Dimensions and Weights

Bench Model 4100, 8 1/2" wide, 5 1/4" high, 14 1/2" deep, 16 lbs/8kg net, 22 lbs/10kg shipping. Rack-mounting Model 4100R, 19" wide, 5 1/4" high, 14 1/2" deep, 20 lbs/9kg net, 26 lbs/12kg shipping.

SECTION 2

OPERATING INSTRUCTIONS

2.1 GENERAL

On receipt of the Oscillator, carefully examine it for any damage that may have occurred in transit. If signs of damage are observed, file a claim with the transporting agency immediately, and notify your Krohn-Hite representative or Krohn-Hite Corporation directly. Do not attempt to use the Oscillator if extensive damage has occurred and do not ship it back until the carrier has inspected it. It may be opened for inspection without nullifying the warranty.

Rack-mounting models (designated by a suffix "R" after the model number) mount with four machine screws in the standard 19" rack space. No special brackets or attachments are needed.

2.2 OPERATION

To operate the Oscillator, proceed as follows:

a. Make appropriate power connections as described in Section 2.4.

b. Make appropriate connections to the front panel or rear chassis OUTPUT connectors of the Oscillator.

c. Select the desired frequency with the three banks of ten pushbutton switches to establish up to three significant figures of the operating frequency. Select the desired frequency range by engaging one of the five MULTIPLIER pushbuttons. CAUTION! The Oscillator will not function unless one button in each of the three FREQUENCY switches and MULTIPLIER switch is depressed. For maximum frequency accuracy the first bank of push-button switches should not be set to zero unless frequencies below 10 Hz are required. For example, 150 Hz should not be obtained by engaging the 0, 1, 5 buttons (left to right) and the X10 MULTIPLIER. For rated performance and maximum frequency accuracy, 150 Hz should be obtained by setting 1, 5, 0, and the X1 MULTIPLIER. If the first bank of push-button switches is set to zero above 10 Hz, the Oscillator will not function within its rated specifications, and the sine wave output will drop below its normal amplitude. This effect will be more pronounced on the higher frequency bands.

d. The three banks of ten push-button switches and associated multiplier reads directly in Hz when the FREQUENCY VERNIER control is in the maximum counter clock-wise position or calibrate position. This control varies the frequency continuously by an amount equal to the increment between adjacent buttons of the third switch bank. The FREQUENCY VERNIER is also used to obtain any frequency between 0.01 and 0.1 Hz by setting all three banks of push-buttons to zero and the MULTIPLIER to the X0.1 position.

e. Adjust sine wave output amplitude by means of the dual RMS VOLTS controls which consist of an eleven position switch and concentric vernier potentiometer.

The switch provides ten 1-volt increments from zero to 9 inclusive. In the first switch position (0-0.1) this concentric infinite-resolution vernier provides continuous output from near zero (approximately 2 millivolts) to a nominal 100 millivolts. In the next ten switch positions this vernier covers a nominal 1-volt range. A graphical representation of the required positions of both the switch and concentric vernier is shown below to obtain a sine wave out of approximately 50 millivolts and 3.7 volts rms respectively.

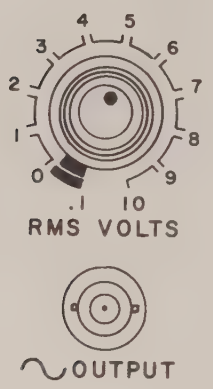

Position of Controls for 50 Millivolts Out

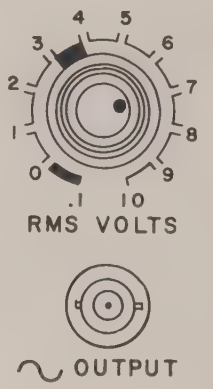

Position of Controls for 3.7 Volts Out

f. For normal Oscillator operation the FLOATING CHASSIS GROUND switch, located on the rear of the chassis, should be in the CHASSIS position. If the Oscillator is used in a system where ground loops make ungrounded or floating operation essential, this switch should be in the FLOATING position. In this position the Oscillator signal ground should be tied to a suitable remote system ground to prevent degradation of Oscillator performance, principally hum level and high frequency calibration.

2.3 EXTERNAL SYNCHRONIZATION

An EXTERNAL SYNC connector on the rear of the chassis is provided to synchronize the frequency of the Oscillator to an external signal. Connect the external signal to the EXTERNAL SYNC input connector at the rear of the chassis and tune the Oscillator to the frequency of the external signal. With an external sine or square wave synchronizing signal of 1.5 volts peak-to-peak, the Oscillator output will be locked in frequency to the external signal over a locking range of approximately ±1/2% of the Oscillator frequency setting. The Oscillator distortion will rise to approximately 0.02% with an external sine wave synchronizing signal and to 0.1% for a square wave external signal. When the Oscillator frequency is the same as the external signal frequency, the Oscillator output will lead the external synchronizing signal by approximately 70 degrees. A ±1/2% variation in the Oscillator frequency will vary their relative phase by approximately ±80 degrees.

Locking range and distortion increase linearly with the external synchronizing signal amplitude. With a 6 volt peak-to-peak sine wave external synchronizing signal,

the maximum recommended, the locking range will increase to ±2% and the distortion will be approximately 0.05%. With a square wave external synchronizing signal, the same locking range of ±2% will be obtained but the distortion will rise to approximately 0.4%.

2.4 LINE VOLTAGE AND FUSES

The Oscillator is normally wired for operation from an a-c power source of 105-125 volts 50 to 400 Hz, and uses a 1/2 ampere slow-blow fuse that is mounted on the rear of the chassis. It may be modified to operate from an a-c power source of 210 - 250 volts by removing the two jumpers between terminals 1 and 3, and terminals 2 and 4 of the power transformer, and connecting a jumper across terminals 2 and 3. A 1/4 ampere slow-blow fuse should be used for 210-250 volt operation. An identifying tag attached to the line cord will indicate when the Oscillator is wired for 230 volt line operation.

Access to the interior of the Oscillator is accomplished easily without any hand tools by loosening (not removing) the two black thumb screws centered on each side at the rear of the chassis and then pulling out the two side covers. This unlocks the top and bottom covers which then may be pulled out. Access to the transformer terminals can be accomplished by removing only the two front mounting screws that fasten the unregulated power supply chassis in the rear and then swinging up the chassis.

SECTION 3

CIRCUIT DESCRIPTION

3.1 INTRODUCTION

The Model 4100, shown in the Simplified Schematic Diagram Figure 2, is an RC Oscillator whose frequency is determined by a regenerative Main Amplifier in conjunction with a frequency determining network consisting of R_1C_1 and R_2C_2. Amplitude constancy is attained by a unique dual AVC system.

One AVC circuit has low gain but fast response to provide rapid recovery from transients. It samples the peak of the positive and negative excursion of the Oscillator output, comparing it to two stable zener references Z131 and Z132, and develops a square wave error signal across a storage capacitor. This square wave,

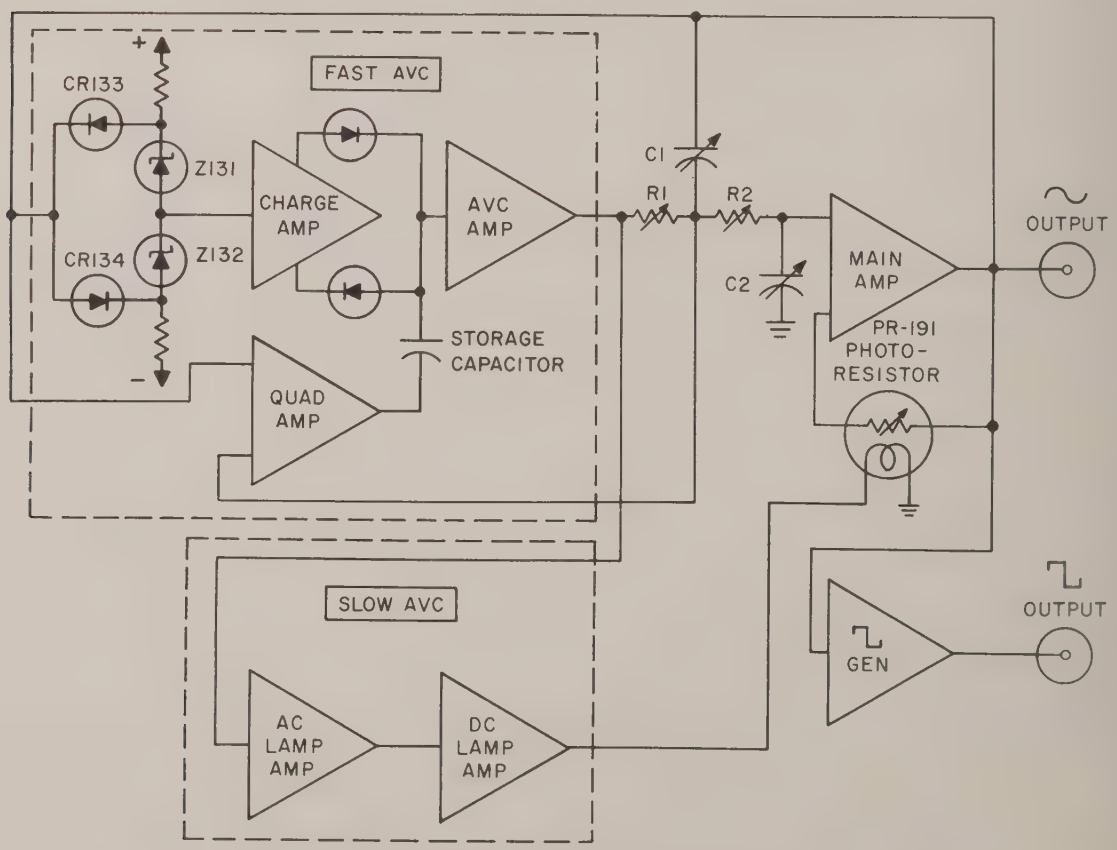

Figure 2. Simplified Schematic Diagram

which is in quadrature with the Oscillator sine wave output, after further amplification by the AVC Amplifier is fed back via the frequency determining network to the Main Amplifier.

The other AVC circuit has slow response but high gain to maintain long-term amplitude stability. It uses a photo-resistor, PR-191, to control the gain of the Main Amplifier. The incandescent lamp in this photo-resistor is energized by the Lamp Amplifiers. The input to the AC Lamp Amplifier comes from the AVC Amplifier output. The DC Lamp Amplifier converts the output of the AC Lamp Amplifier to a dc voltage that illuminates the lamp in the photo-resistor. Since these high gain amplifiers precede the lamp, the Oscillator output is insensitive to external shock and vibration.

In the following discussion reference to both the Simplified Schematic Diagram, Figure 2, and the Schematic Diagram Figure 9 at the end of this manual is recommended.

3.2 FREQUENCY DETERMINING CIRCUITS

The tuning controls for this Oscillator include a five station push-button switch that selects a pair of frequency determining capacitors C_1 and C_2, to establish each decade of frequency. Capacitor C_1 is ten times the value of Capacitor C_2. Equal frequency determining resistors, R_1 and R_2, establish the frequency within decades, and are selected by the three banks of ten push-button switches to establish up to three significant figures of frequency. A frequency vernier adjustment using a dual potentiometer essentially shunts both resistor networks to vary frequency between the smallest digit increments to provide continuous frequency coverage. This vernier is also the sole frequency control for the lowest decade of the frequency range from 0.01 to 0.1 Hz.

3.3 MAIN AMPLIFIER

The sine wave output of the Oscillator is generated by the Main Amplifier. It consists of an input FET (field-effect transistor) follower, two stages of amplification, and a complimentary push-pull output stage. The FET follower Q191, isolates the high impedance frequency determining network, and drives the second stage differential amplifier Q194 and Q195. Q192 and Q193 function as a high-value resistor approximating a constant-current source. The differential output from the second stage drives the third stage which is a complementary differential amplifier using an NPN transistor Q196 in series with a PNP transistor Q197. A single-ended output from the collector of Q197 drives the output stage, Q198 and Q199.

3.4 AVC

To maintain the high-degree of amplitude constancy the Oscillator uses a dual AVC system. One AVC circuit has low gain but fast response to provide fast recovery from transients, and the other AVC circuit has slow response but high gain to maintain long-term amplitude stability.

In the fast AVC circuit the positive and negative peaks of the sine wave output are compared with two stable zener references Z131 and Z132 in the Charge Amplifier. Two diodes CR133 and CR134, are backed biased by these two zeners producing a positive and negative pulse when they conduct at the peaks of the sine wave. The attenuated sine wave output that drives these diodes is derived from the emitter follower Q132. Transistor Q131, used as a diode, and diodes CR131, CR132 and CR135 provide temperature compensation.

A two-stage degenerative amplifier, consisting of transistors Q133 and Q135 amplifies these positive and negative pulses to an amplitude of approximately 3.5 volts peak, and provides the necessary current capacity to charge the storage capacitor whose value is varied by the band multiplier switch. The positive and negative pulses from the Charge Amplifier develop a quadrature square wave error signal across the storage capacitor through the switching diodes Q136 and Q137 which are back-biased by zener Z134. Zener Z133 is used for level pulling only.

To maintain amplitude constancy when the sine wave output falls below its normal value, the Quadrature Amplifier adds a constant amplitude offset square wave to the storage capacitor which is out-of-phase with the square-wave that the Charge Amplifier develops across the storage capacitor. Under normal conditions these signals cancel each other with a resulting zero error voltage. This permits the fast AVC circuit to generate a corrective error voltage when the sine wave output drops below its normal amplitude.

The Quadrature Amplifier develops a square wave whose amplitude is constant, independent of the normal fluctuations in the sine wave output due to tuning transients or other similar disturbances. This quadrature square wave is developed by adding a signal from the junction of the frequency determining network resistors to the Oscillator sine wave output. The addition of these two signals is accomplished by the differential amplifier Q243 and Q244. Before adding the signal from the network, it is first buffered by a two-stage unity-gain amplifier which consists of FET Q241 and transistor Q242. The output from the collector of Q242 is fed to the first base of the differential amplifier Q243, and a portion of the Oscillator sine wave output is applied to the second base of the differential amplifier Q244. The square wave output at the collector of Q243 is shaped by limiting diodes CR241 and CR242 so that its output appearing at the emitter follower Q245 is a clean constant amplitude square wave.

The error voltage developed at the storage capacitor is amplified by the AVC Amplifier which is a three-stage degenerative amplifier consisting of a FET input stage Q161, amplifier Q162 for the second stage, and a Darlington output stage, consisting of Q164 and Q165. A corrective error voltage from the AVC Amplifier is fed back through the frequency determining network components to close the loop. This completes the operation of the low gain fast AVC circuit.

In the high gain slow AVC circuit the output of the AVC Amplifier is further amplified by the AC Lamp Amplifier which has a gain of approximately 50. It is a two-stage degenerative amplifier consisting of Q311 and output stage Q313 and Q314. The Quadrature Amplifier output is also applied to the input of the AC Lamp Amplifier. It maintains the lamp in the photo-resistor in middle of its dynamic range.

The output of the AC Lamp Amplifier, which is normally an 8 volt peak-to-peak square wave, is converted to a dc voltage in the DC Lamp Amplifier which provides the power to illuminate the lamp in the photo-resistor PR191. This DC Lamp Amplifier consists of a switching transistor, Q331, that functions as a half-wave rectifier, and a two-stage amplifier with differential input stage Q332 and Q333, and output stage Q334. The output of the AC Lamp Amplifier is half-wave rectified by the transistor Q331 whose emitter is switched by the Quadrature Amplifier. This half-wave rectified signal is applied to the base of the differential amplifier Q332. To generate a full wave rectified signal, one half of the AC Lamp Amplifier output is also added to the half-wave rectified signal. The full-wave rectified signal is first filtered and then amplified. The output of the DC Lamp Amplifier, appearing at the collector of Q334, is normally about 6 volts dc and it illuminates the incandescent lamp in the photo-resistor. If an amplitude disturbance occurs, this dc voltage will vary and change the resistance element in the photo-resistor. Since this resistor is part of the feedback network of the Main Amplifier, it will vary the gain of the amplifier to correct this disturbance and restore the Oscillator to its normal amplitude.

3.5 SQUARE WAVE

The square wave generator consists of a Schmitt trigger circuit Q281 and Q282 which is triggered by the sine wave output. A transistor switch Q283 which is driven off and on by the Schmitt trigger provides the square wave output. A 50 ohm constant impedance output is obtained by connecting the output of the switching transistor Q283 to the center arm of the square wave amplitude control potentiometer. The square wave output is 180 degrees out-of-phase with sine wave output.

3.6 POWER SUPPLY

The Power Supply furnishes two regulated voltages of +22 and -22 volts. It consists of two full-wave rectifiers CR101 and CR104 and filter capacitors C101 and C106 to provide the unregulated dc voltages. Both supplies are of the typical series type. The +22 volt supply is the master supply using zener Z101 as a reference and amplifiers Q102 and Q103 to drive the series regulator Q101. Short circuit protection is provided by the series resistor R105 which cuts off Q102 via diode CR102. The -22 volt supply is slaved to the +22 volt supply. A divider network consisting of R126 and R127 sets the proper voltage level for the amplifiers Q105 and Q106, which drives the series regulator Q104. Short circuit protection is provided by R117 and diode CR105. To insure starting, a zener Z102 provides a negative voltage for the regulating amplifiers in the absence of the -22 volt supply. Diode CR107 is normally conducting and permits Z102 to function when required.

SECTION 4

MAINTENANCE

4.1 INTRODUCTION

If the Oscillator is not functioning properly and requires service, the following procedure may facilitate locating the source of trouble. The general layout of major components of the Oscillator is shown in Figure 3. The Oscillator consists basically of an unregulated power supply chassis in the rear, which can swing up to facilitate maintenance, a large printed circuit card, PC418, and five small printed circuit cards associated with the frequency controls. The most frequently used check points have been provided with test points. They are identified as shown in Figure 3.

Access to the interior of the Oscillator is accomplished easily without any hand tools by loosening (not removing) the two black thumb screws centered on each side at the rear of the chassis and then pulling out the two side covers. This unlocks the top and bottom covers which then may be pulled out. The unregulated power supply chassis in the rear can swing up by first removing the two front mounting screws.

Many troubles may easily be found by visual inspection. When a malfunction is detected, first check the line voltage and line fuse and then make a quick check for broken wires, burnt or loose components, or similar conditions which could cause trouble. When a malfunction is encountered, before beginning troubleshooting it should be determined if the normal adjustments mentioned in Calibration and Adjustment procedure, Section 5, will correct the trouble. Any troubleshooting of the Oscillator will be greatly simplified if there is an understanding of the operation of the circuit. Before any detailed troubleshooting is attempted, reference should be made to Circuit Description, Section 3. When a problem is encountered, it should first be determined if the malfunction is present under all conditions, or is only present under certain conditions such as certain frequency selector switch positions or on certain frequency multiplier bands. If the problem seems to be of general nature, the troubleshooting procedure outlined here should be followed. If the trouble is only present under specific conditions, however, the procedure must be adapted to fit the circumstances. Caution! Because there is a 10 ohm resistor connected between signal ground and chassis when the Floating/Chassis grounding switch is in the Chassis position, the Chassis should not be used as a test point for signal ground in making measurements. The shell of the sine wave output BNC connector is a convenient signal ground test point.

4.2 PRELIMINARY CHECKS

The Oscillator should be set up as follows:

1. Frequency selector switches at 1, 0, 0
2. Frequency Multiplier switch at X100
3. Sine wave output amplitude control at maximum cw
4. Floating/Chassis grounding switch (in rear of chassis) in Chassis position

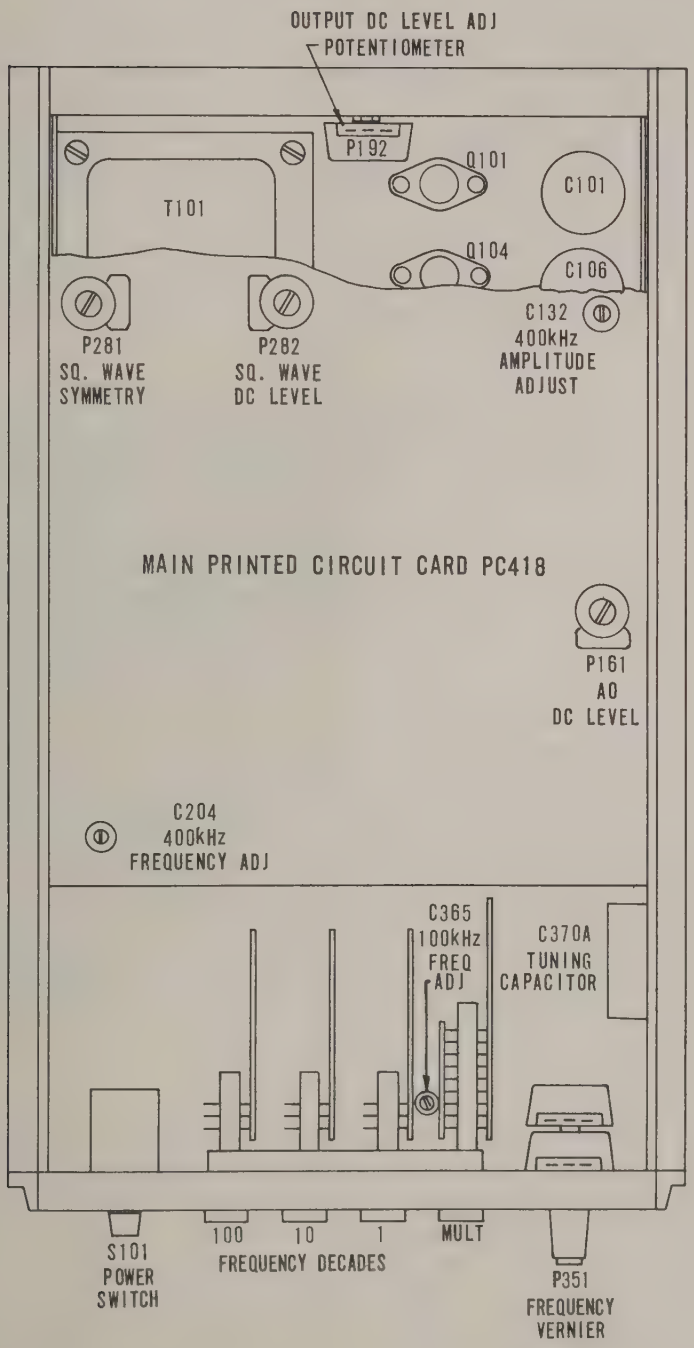

Figure 3. Exposed Top View of Oscillator

If the sine wave output appears to be correct, but the Square Wave is not, refer to Section 4.10. First check the two dc Power Supply voltages at the +22 vdc and the -22 vdc test points which are on the large card as shown in Figure 3. If these levels are off by more than ±1 volt, refer to Section 4.4.

If these supplies are correct, check the Main and AVC Amplifier output dc levels with respect to signal ground at test points (MO) and (AO) respectively, positioned on the large card as shown in Figure 3. To prevent spurious oscillations from disturbing these measurements short circuit the input of the Main Amplifier by connecting the test point (MI) on the large card to signal ground (shell of BNC connector). These dc levels should both be within less than ±0.1 volt. If necessary adjust these levels. The screwdriver control P191 for adjusting the output dc level of the Main Amplifier is at the rear of the chassis. The screwdriver control P161 for adjusting the output dc level of the AVC Amplifier is mounted on the large card as shown in Figure 3. If the correct levels can not be obtained, the trouble is probably in either the MAIN or AVC Amplifiers respectively, and reference should be made to Section 4.5 or Section 4.6 whichever is applicable.

Remove the short circuit from the test point (MI) and connect test point (QI) to signal ground. Recheck the output dc level of the Main Amplifier. This level should remain at 0 ±0.1 volt, when (QI) is shorted to ground. If it does not, the input transistor of the Main Amplifier Q191 may be defective or there is a malfunction in the frequency determining network.

Remove the short circuit from test point (QI) to chassis ground and recheck the (AO) dc level. This level should again remain at 0 ±0.1 volt, when this short circuit is removed. If it does not, the Quadrature Amplifier is probably defective and reference to Section 4.6.1.3 is recommended. If the Main and AVC output dc levels are correct, a signal tracing analysis should be used to find the source of trouble.

4.3 SIGNAL TRACING

Connect an external signal source and network to the test point (MI) in the Oscillator as shown below in Figure 4. The signal ground of the external signal source should be connected to the shell of the sine wave output BNC connector. This source should be capable of providing a 10 volt rms sine wave into 1000 ohm load at 10 kHz. Adjust the external source to approximately 8 volts rms at 10 kHz, and set the Oscillator to 10 kHz (1-0-0, x 100). Check the Oscillator sine wave output voltage. This should be a sine wave with an amplitude of approximately 10 volts rms. If this signal is incorrect, the trouble is probably in the MAIN Amplifier and reference to Section 4.5 is recommended. If the signal is correct, check the AVC Amplifier output signal at the test point (AO). Adjust the external source until the Oscillator

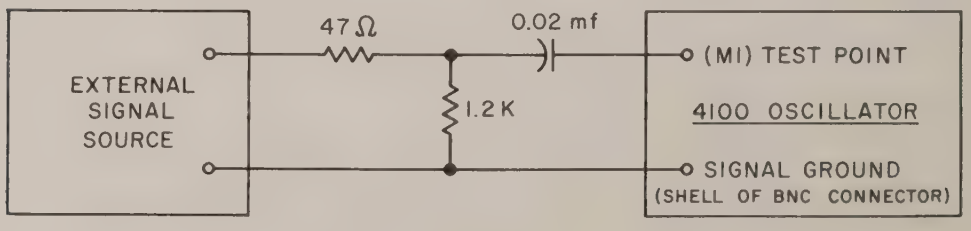

Figure 4. Circuit for External Signal Application

sine wave output is at 9 volts rms. The (AO) signal should be a square wave leading the Oscillator sine wave output by approximately 90°. As the external source is increased, this square wave should go through a null with approximately 9 volts external input and reverse phase as the external input signal is increased. If the AVC Amplifier is functioning as described, the entire Fast AVC circuit, consisting of the Charge Amplifier, Quadrature Amplifier and AVC Amplifier, is functioning properly. If the AVC Amplifier is not functioning as described above, reference to Section 4.6 is recommended.

As shown in the Simplified Schematic Figure 2, if the Main Amplifier and Fast AVC circuits are operating properly, the remaining circuitry in question consists of the AC and DC Lamp Amplifiers in the Slow AVC circuit. With the external source connected as before, check the DC Lamp Amplifier output at the test point (LD). It should be approximately zero volts dc when the Oscillator sine wave output is at 9 volts rms and increase to approximately -10 volts dc as the external signal is increased. If the DC Lamp Amplifier does not function in this manner, refer to Section 4.6.2.

4.4 POWER SUPPLY

The Power Supply consists of two separate regulated supplies of +22 and -22 volts dc. The +22 is used as a reference supply for the -22, and this fact should be kept in mind when doing any work on the supply, as a malfunction in the +22 will be reflected in the -22. If the supplies do not seem to be working properly, the +22 should be checked first. The two supplies have current limiting circuits which will shut down the supply if excessive current is being drawn from it. For this reason an apparent malfunction in the supply could be caused by an overload in one of the other circuits (e.g.) a collector to emitter short in one of the output transistors of the Main Amplifier will overload the power supply.

Nominal voltages for various points in the supplies are given in the Schematic, Figure 9. If a malfunction occurs, the error signal thus developed should be traced through the circuit to find the faulty component. Let us suppose, for example, that the +22 was lower than normal. This would produce an error signal which would make both the base and emitter of Q103 more negative than normal. Because the base moves less than the emitter the total result is a lowering of the collector from its normal value. The base of Q102 should then be more negative than normal and the collector more positive. This will raise the base of series regulator transistor Q101 and finally should correct the output level. Had there been a bad component somewhere in the circuit, this correcting action would have been blocked. The faulty component would then have been found at the point in the circuit where this action was blocked. The same basic method of troubleshooting described above may also be used in the other supply when a malfunction occurs.

If it becomes necessary to replace the reference zener Z101, the voltage of the +22 supply will probably have to be readjusted. This may be done by changing the fixed trim resistor R114B in parallel with R114A (do not disturb R114A). R114B is located on the large card as shown in Figure 3. This resistor should be trimmed so the supply is within +22 ±1 volt. If the -22 supply exceeds -22 ±1 volt, change the fixed trim resistor R127B in parallel with R127A (do not disturb R127A). R127B is located on the large card.

4.5 MAIN AMPLIFIER

When it appears that the problem has been isolated to the Main Amplifier, connect the test point (MI) to signal ground (shell of the BNC connector) and check the output dc level of the Main Amplifier at test point (MO) on the large card. This voltage

can be set to zero when the Main Amplifier is functioning properly by adjusting the output dc level potentiometer P192 at the rear of the chassis. If this level cannot be set to zero ±0.1 volt, the Main Amplifier is probably defective, and the dc error signal thus developed should be traced through the circuit. For example, if the output level is plus, the feedback should raise the base of Q195 from its normal value of zero. This will then cause its collector to become more negative than normal. The base of Q196 and the collector of Q197 will also go more negative than their normal values. This should then lower the bases of Q198 and Q199 and correct the output level. If a faulty component is present in the circuit, it will prevent this corrective action from taking place. The faulty component will be found at the point in the circuit where the correcting action is blocked. The correct voltages for key points in the Main Amplifier are shown in the Schematic Figure 9. Most problems in the Main Amplifier will show up in a level check and the trouble-shooting method described above may be used to find the problem. If all the levels seem to be right and the unit seems to be working but will not put out the maximum rated output voltage or take power, Q198 and Q199 should be checked.

If it becomes necessary to replace the FET (field-effect-transistor), Q191, the Main Amplifier output dc level may have to be trimmed. With the same initial set up as given at the beginning of this section, check the output dc level of the Main Amplifier at test point (MO). If this level is other than zero and the rear chassis sine wave output dc level control, P192 will not correct it, change the fixed trim resistor R201B in parallel with R201A (do not disturb R201A). R201A is located on the large card. This adjustment should be made with P192 centered for optimum range of adjustment.

4.6 AVC CIRCUITS

When there appears to be trouble in the AVC circuits, the Oscillator should remain set up for a 10 kHz external input signal as shown in Figure 4. The short circuits from the test points should be removed and the signal from the external source should be varied in amplitude so that the Oscillator sine wave output varies from 9 to 11 volts rms. While making this variation the AVC Amplifier output signal at test point (AO) should be observed. When the Oscillator sine wave output is at 9 volts rms, the (AO) signal should be a square wave of at least 0.3 volts peak-to-peak amplitude leading the Oscillator sine wave output by approximately 90°. When the output is at 11 volts rms, the (AO) signal should be a square wave with an amplitude of at least 0.3 volts peak-to-peak, lagging the Oscillator sine wave output by approximately 90°. As the output is varied through 10 volts, the (AO) signal should go through a null. If this action takes place, the entire Fast AVC circuit is probably functioning properly. Proceed to check the Slow AVC circuit by referring to Section 4.6.2. If the (AO) signal is not normal, refer to Section 4.6.1.

When it is necessary to replace the FET (field-effect-transistor), Q161, the AVC Amplifier output dc level may have to be retrimmed. Short circuit test point (MI) to chassis, and check the AVC Amplifier output dc level at test point (AO). Adjust the (AO) dc level control P161, positioned on the large card as shown in Figure 3, until (AO) is at zero ±0.1 volt. If P161 will not zero the (AO) dc level, change the fixed trim resistor R171B in parallel with R171A (do not disturb R171A). This adjustment should be made with P161 centered for optimum range of adjustment.

4.6.1 Fast AVC Circuit

If the AVC Amplifier output signal (AO) is not correct, connect the external signal as shown in Figure 4 and check the input to the AVC Amplifier at test point (AI). This signal normally should be an approximate square wave varying through a null as the Oscillator sine wave output is varied from 9 to 11 volts rms. The (AI) signal

should look like the (AO) signal, but inverted because the AVC Amplifier has a gain of minus one.

A normal (AI) signal but an incorrect (AO) signal indicates that the AVC Amplifier is probably not functioning and reference to Section 4.6.1.1 is recommended. If the (AI) signal is incorrect either the Charge Amplifier or the Quadrature Amplifier may be defective. Observe the output of the Charge Amplifier at test point (CO) as the Oscillator sine wave output is varied from 9 to 11 volts rms by the external signal and compare it with the correct waveforms as shown in Figure 5. If the Charge Amplifier output is incorrect, refer to Section 4.6.1.2. If the Charge Amplifier output is normal, check the output of the Quadrature Amplifier at test point (QO). It should be a square wave with an amplitude of 2-3 volts peak-to-peak, lagging the Oscillator sine wave output by approximately 90°. If this signal is incorrect, refer to Section 4.6.1.3.

When both the (CO) and (QO) signals are correct but the (AI) signal is not, the most likely source of trouble is one of the components in the Isothermal Chamber IC-102.

4.6.1.1 AVC Amplifier

When the output of the AVC Amplifier (AO) is not right but the input (AI) is normal and goes through a null as the Oscillator output varies from 9 to 11 volts rms, the trouble probably lies in the AVC Amplifier. To prevent any unwanted signals from disturbing the following dc measurements, short circuit (AI) to chassis ground. Nominal voltages for various points in the AVC Amplifier are shown on the Schematic Figure 9. First check the gate and source quiescent dc voltages of the FET Q161, to determine if they are normal. If the (AO) dc level is not zero ±0.1 volt and the AVC Amplifier output dc level control potentiometer, P161, will not correct it, the error voltage thus developed should be traced through the feedback loop. If, for example, the (AO) output is plus, this should drive the base of Q162, which is normally zero, more positive. This would make the collector of Q162 more negative than normal and drive the bases of Q164 and Q165 more negative to correct the (AO) output level. The faulty component will be found where the above corrective action is blocked.

4.6.1.2 Charge Amplifier

When it appears that the Charge Amplifier is not functioning properly, check the waveform of the Charge Amplifier output at test point (CO). Vary the Oscillator sine wave output from 9 volts rms to 10 volts rms and then to 11 volts rms (by varying the external source signal). The proper waveform of the (CO) signal for the three conditions are shown in Figure 5. The normal (CO) signal is shown in Figure 5b.

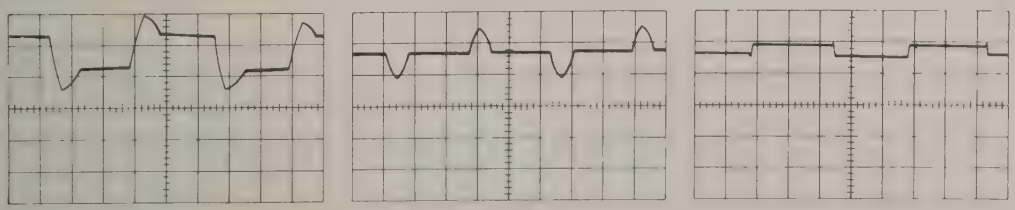

a. 9 volts b. 10 volts c. 11 volts

Figure 5. Charge Amplifier Output Signal (CO) with Oscillator Sine Wave Output Amplitude at 9, 10, and 11 volts rms. Vertical sensitivity 6 volts/div.

If the (CO) signals are not correct, check the emitter follower output at test point (CI) which is also the input to the Charge Amplifier. This should be a sine wave of 7 volts rms when the Oscillator sine wave output is 10 volts rms. If the (CI) signal is incorrect, the network which attenuates the Oscillator sine wave output or the transistors Q131 and Q132 are defective.

If the (CI) is correct but the (CO) signal is not, the problem is most likely in the Isothermal Chamber IC-101 or the amplifier which consists of Q133 and Q135. To isolate which of these is defective, observe the waveform at the junction of R144, R145 and R146 which is terminal 5 of the Chamber IC-101. If the amplifier is functioning properly, this waveform should be similar to the (CO) signal except that its amplitude will be reduced by the gain of the amplifier which is approximately 150. A correct signal at terminal 5 indicates a defective component in the Isothermal Chamber. When IC-101 is replaced, it may be necessary to change the fixed trim resistor R137B in parallel with R137A (do not disturb R137A), to make the positive and negative (CO) pulses, as shown in Figure 5, of equal amplitude.

4.6.1.3 Quadrature Amplifier

When it appears that the Quadrature Amplifier is not functioning, check its output at test point (QO). It should be a square wave of 2 to 3 volts peak-to-peak amplitude lagging the Oscillator sine wave output by approximately 90°. If this signal is not correct, check the signal at the test point (QV), which should be a sine wave leading the Oscillator sine wave output by approximately 20° with an amplitude of approximately 9 volts rms. It is important for this test that the external signal source and the Oscillator be set to the same frequency as outlined in Section 4.2. If the signal at (QO) is not correct, check Q243 and Q244 and associated components. Incorrect phase may indicate a problem in the tuning network (see Section 4.7). If the signal at (QV) is correct but (QO) is not, check Q243, Q244 and Q245 and associated components.

When it is necessary to replace the FET (field-effect-transistor), Q241, the dc level at test point (QV) should be checked. Short circuit test point (QI) to chassis and measure the dc level at test point (QV). It should be 0.3 ±0.1 volt. If necessary, change the fixed trim resistor R243B in parallel with R243A (do not disturb R243A) to obtain a voltage of 0.3 volt dc at test point (QV).

4.6.2 Slow AVC

When it appears that the Slow AVC is defective, either the AC or DC Lamp Amplifiers are most likely not functioning properly. Measure the dc voltage on the output of the DC Lamp Amplifier at test point (LD) as the Oscillator sine wave output signal is varied from 9 to 11 volts rms by varying the external source. The dc voltage should vary from approximately zero to about -10 volts dc. If this action takes place, the Slow AVC circuit is probably functioning correctly.

If the (LD) voltage is incorrect, but the (AO) signal was found to be correct, check the output of the AC Lamp Amplifier at test point (LA). With (AO) set for a null, the (LA) signal should be an approximate square wave with an amplitude of approximately 8 volts peak-to-peak, leading the Oscillator sine wave output by approximately 90° and with a dc component of zero ±1 volt dc. The square wave amplitude should increase to over 25 volts peak-to-peak when the Oscillator output is 11 volts rms and decrease through a null to a signal lagging the Oscillator output by approximately 90° with an amplitude of over 4 volts peak-to-peak when the Oscillator output is reduced to 9 volts rms. If the (LA) signal is correct, but the (LD) dc voltage does not vary correctly, the DC Lamp Amplifier is probably defective. Check the signal on test point (LR). This should be the negative half-wave rectified portion of

the (LA) signal but inverted with 6 volts peak-to-peak amplitude when the Oscillator sine wave output is at 10 volts rms, because Q331 is a rectifier with minus unity gain which is being switched off and on by the Quadrature Amplifier. If the (LR) signal is incorrect, check Q331 and associated components. If the (LA) and (LR) signals are correct, but the (LD) dc voltage does not vary correctly, check the transistors Q332, Q333 and Q334. If the (LA) signal is incorrect, the AC Lamp Amplifier is not functioning and the most likely source of trouble is the transistors Q311, Q312, Q313 and Q314.

4.7 TUNING NETWORK

Problems on certain multiplier bands or on certain positions of the frequency selector push-button switches will usually be caused by something in the tuning network. If the trouble appears only at a particular setting of the frequency selector push-button switches, the problem is most likely one of the frequency determining resistors associated with that setting. The Schematic Diagram, Figure 9, shows which resistors come into play for each setting of the frequency selector push-button switches. After determining which switch position is bad, reference to this figure should point out the faulty resistor. All of the frequency determining resistors R366 to R419 are mounted on the three printed circuit cards PC415 (X100), PC415 (X10) and PC415 (X1) that are attached to the push-button switches. The resistors are located on these cards as shown on Figure 8.

If one of the frequency determining band capacitors C364 to C370 is defective or out of tolerance, the Oscillator will not function properly or the frequency calibration will be in excess of its rated tolerance in <u>two</u> adjacent bands. This condition prevails because each tuning capacitor is used on two bands. For example, on band 4 (X100 multiplier), the frequency determining capacitors are C366A (910pf) and C367A (0.01mf). On band 3 (X10 multiplier) C367A is used again in addition to C368A (0.1mf). Therefore, if C367A or trimmer capacitor C367B, which is in parallel with C367A, is out of tolerance, the frequency accuracy will be out of calibration on both bands 3 and 4. The tuning capacitors are mounted on the printed circuit card PC 416 that is attached to the multiplier push-button switch. The position of these capacitors on this card is shown on Figure 8. When the frequency is out of calibration by a small amount, it is recommended that the trim capacitors C366B to C370B, whichever is applicable, be changed rather than the fixed capacitors C366A to C370A.

4.8 SINE WAVE OUTPUT ATTENUATOR

The Schematic Diagram, Figure 9, also shows the concentric decade sine wave output attenuator used on the Oscillator. If trouble is encountered with the attenuator, it should first be determined which position of the switch is bad. After determining this, reference to the appropriate resistor in the attenuator table, shown in Figure 9, should point out the faulty component.

4.9 SQUARE WAVE

The Square Wave circuit depends on the Oscillator sine wave output for its operation. If the Square Wave does not seem to be working, check to see if the Oscillator is operating properly before attempting to troubleshoot the Square Wave. The Oscillator should be set up as follows before beginning troubleshooting of the Square Wave.

a. Oscillator frequency at 1 kHz.

b. Square Wave amplitude control at maximum cw.

If no Square Wave appears at the output, check the waveform at the test point (SO), which is the output of the Schmitt trigger. The signal here should be a square wave of approximately 12 volts peak-to-peak amplitude. If the (SO) signal is incorrect, the trouble is probably in Q281 or Q282, or their associated components. If the correct signal is present at (SO) but not at the Square Wave output BNC connector, check the Square Wave output transistors Q283 and Q284 and associated components.

SECTION 5

CALIBRATION AND ADJUSTMENT

5.1 INTRODUCTION

The following procedure is provided for the purposes of facilitating the calibration and adjustments of the Oscillator in the field, and adherence to this procedure should restore the Oscillator to its original specifications. If any difficulties are encountered, please refer to Maintenance, Section 4. If any questions arise which are not covered by this procedure, please consult our Factory Service Department. The location of all major components, modular sub-assemblies, test points, screwdriver controls and adjustments are shown in Figure 3.

Access to the interior of the Oscillator is accomplished easily without any hand tools by loosening (not removing) the two black thumb screws centered on each side at the rear of the chassis and then pulling out the two side covers. This unlocks the top and bottom covers which then may be pulled out. The unregulated power supply chassis in the rear can swing up (by first removing the two front mounting screws) to facilitate maintenance.

5.2 TEST EQUIPMENT REQUIRED

The following test equipment is required to perform these tests:

a. Oscilloscope - having direct coupled horizontal and vertical amplifier with at least 10mv/cm sensitivity and a band width of 30 MHz - Tektronix Type 545 or equivalent.

b. Differential Comparator Plug-In Unit - Tektronix Type W or equivalent.

c. Wide Band Plug-In Unit - Tektronix Type 1A1 or equivalent.

d. Precision Frequency and Period Counter - capable of measuring frequency from 100 Hz to 1 MHz and period from 1000 seconds to 1.0 millisecond.

e. Voltmeter-reading to 50 volts dc.

f. Precision AC Differential Voltmeter - capable of measuring voltages from 10 mv to 10 volts rms from 30 Hz to 50 kHz with ±0.1% accuracy. Fluke Model 931P or equivalent.

g. Variable auto-transformer to adjust the line voltage from 105 to 125 volts.

h. Distortion Meter and/or Wave Analyzer-capable of measuring distortion below 0.01% from 20 Hz to 20 kHz.

i. AC Voltage Monitor-Krohn-Hite Model AC-601R or equivalent.

j. Strip Chart Recorder - having 10 mv full scale sensitivity.

5.3 POWER SUPPLY

With the Oscillator operating at 115 volts line, and frequency at 100 Hz (1-0-0, X1) check the +22 and -22 volt regulated supplies with respect to signal ground (shell of BNC connector). The Floating/Chassis grounding switch located on the rear of the chassis should be in the Chassis position. All test points locations are shown in Figure 3.

	Test Point	Voltage and Tolerance
a.	+22 volt test point on large card PC418	+22 ±1 vdc

If necessary, trim fixed resistor R114B in parallel with R114A to obtain +22 vdc (do not disturb R114A).

b.	-22 volt test point on large card PC418	-22 ±1 vdc

If necessary, trim fixed resistor in parallel with R127A to obtain -22 vdc (do not disturb R127A).

5.4 DC LEVEL ADJUSTMENTS

Adjust all dc level controls to zero ±100mv, in the following order:

	Test Point	Control
a.	(AO) test point on large card PC418	P161 located on large card PC418
b.	(MO) test point on large card PC418	P192 located on rear of chassis. 100mV (see

5.5 AVC AMPLIFIER ADJUSTMENT

To obtain low distortion it is necessary that the AVC Amplifier be adjusted properly. Set the Oscillator frequency to 100 Hz (1-0-0, X1). Connect a high sensitivity oscilloscope (at least 10mv/cm) to the AVC Amplifier output at test point (AO), located on the large card PC418, as shown in Figure 3. The square wave component in the (AO) signal should be less than 10 mv peak-to-peak. If it is not, trim fixed resistor R346B in parallel with R346A for minimum (AO) signal (do not disturb R346A). R346B is located on the large card. Figure 6b shows the (AO) signal, which is a sine wave with spikes at peak amplitude, when R346B is trimmed correctly. Note the absence of a square wave signal. In Figure 6a, R346B is too low

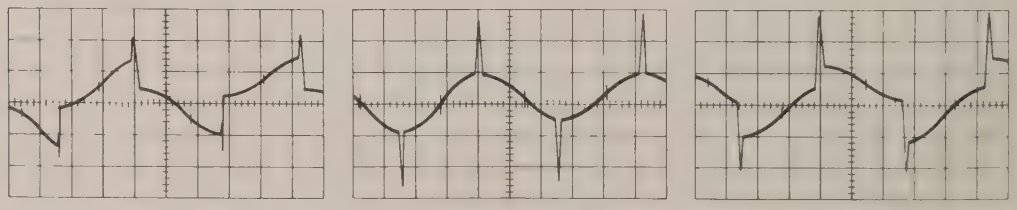

a. Low b. Correct c. High

Figure 6. AVC Amplifier Output Signal (AO) at 100Hz. Vertical Sensitivity - 20mv/div.

and in Figure 6c, R346B is too high, and both have a 20 mv peak-to-peak square wave superimposed on the sine wave signal.

Change the Oscillator frequency to 9 Hz (0-9-0, X0.1). The square wave components in the (AO) signal should be less than 100 mv peak-to-peak. If it is excessive, trim fixed resistor R420B in parallel with R420A for minimum (AO) signal (do not disturb R420A). R420B is located on the printed circuit card PC416,* which is attached to multiplier push-button switch assembly. The location of components on this card is shown in Figure 8. Figure 7b shows the (AO) signal when R420B is trimmed correctly. In Figure 7a, R420B is too low and in Figure 7c, R420B is too high.

* Bottom left corner PC 415 (100 switch Bd).

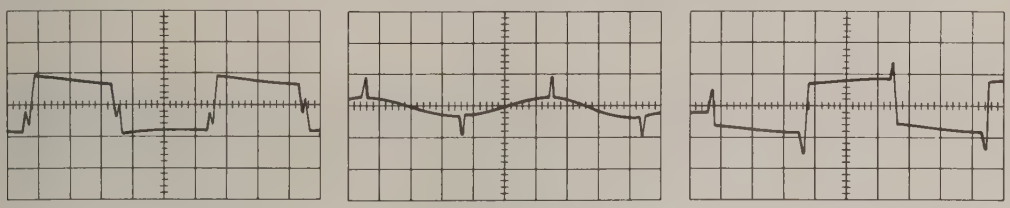

a. Low b. Correct c. High

Figure 7. AVC Amplifier Output Signal (AO) at 9 Hz. Vertical Sensitivity - 50 mv/div.

Set the multiplier switch to the X10 position. Measure the output dc level of the Main Amplifier at test point (MO). It should be 0 ±10 millivolts. If it is not, trim fixed resistor R142B in parallel with R142A for minimum dc level (do not disturb R142A). R142B is located on the large card PC418, as shown in Figure 3.

5.6 DISTORTION

We recommend that the total harmonic distortion be checked at the following frequencies. (It is essential that the procedure outlined in Section 5.5 be performed before making any distortion measurements).

Frequency	Tolerance
20 Hz	0.02%
100 Hz	0.02%
1 kHz	0.02%
20 kHz	0.02%
50 kHz	0.02%

Equipment that will measure distortion of this order of magnitude below 20 Hz is not known to be commercially available, therefore, this procedure does not cover the measurements beyond this range. From 20 Hz up, this can be done fairly successfully by using a wave analyzer (GR, HP, B&K or Marconi) and a pre-filter (B&K or Marconi). Most manufacturers of wave analyzers have the same specification - 1% full scale on the most sensitive range with a 10 volt input signal and internal distortion of about 0.03%. If the pre-filter is set to attenuate the fundamental amplitude, say 60 db, to almost the level of the harmonics, then the analyzer sensitivity can be increased until the largest harmonic is full scale at the new sensitivity. Assume 0.01% second harmonic distortion only. The analyzer is calibrated for an input level (fundamental + harmonic) of 10 volts rms. When the analyzer is set to the second harmonic frequency, the meter sensitivity only can be increased to 1% full

scale (0.1 volts) from 100% full scale or 10 volts. Since the residual analyzer distortion is 0.03%, the example value of 0.01% will not be measurable. Now, if we add a pre-filter and attenuate the fundamental, say 40 db, the analyzer input sensitivity can be increased 40 db for a full scale meter sensitivity of 0.01% and we can now read our theoretical second harmonic value of 0.01% with good accuracy.

Below 20 Hz and above 20 kHz, Krohn-Hite uses a distortion meter type of instrument which has practically no residual distortion in the internal amplifiers - much less than the 0.03% specification of commercial analyzers and distortion meters, and which has an extremely sharp null. Because of the difficulty of achieving a very sharp null at low frequencies, the instrument is not continuously tunable but is fixed tuned at certain selected frequencies.

5.7 FREQUENCY CALIBRATION

Set the Oscillator frequency to 10 Hz (1-0-0, X0.1) with the frequency vernier in the CAL position (maximum ccw). Check the frequency calibration using a frequency counter. If the frequency is out of calibration by more than ±0.5%, refer to Maintenance Section 4.7. Repeat the above procedure at 100 Hz (1-0-0, X1), 1 kHz (1-0-0, X10), and 10 kHz (1-0-0, X100). If the frequency is out of calibration by more than ±0.5%, refer to Maintenance Section 4.7.

Set the Oscillator frequency to 100 kHz (1-0-0, X1000) with the frequency vernier in the CAL POSITION (maximum ccw). Check the frequency calibration using a frequency counter. For optimum calibration accuracy the Oscillator should be permitted to warm up for not less than 30 minutes and all the covers should be in position. Slide the covers back to obtain access to the adjustments and then return them before taking a frequency measurement. If the frequency is out of calibration by more than 0.5%, adjust trimmer capacitor C365, located on the printed circuit card, PC416 which is attached to the multiplier push-button switch. The location of the components on this card is shown in Figure 8. Check the frequency calibration at 400 kHz. If calibration is off more than ±1%, adjust trimmer capacitor C204 located on the large card, PC418, as shown in Figure 3. Check the frequency at 999 kHz. If calibration is off more than ±2%, adjust fixed trim resistor R215B in parallel with R215A (do not disturb R215A).

5.8 ATTENUATOR CALIBRATION

The output attenuator of the Oscillator uses a single decade switch attenuator plus concentric vernier. Set the Oscillator frequency to 100 Hz (1-0-0, X1). Using an ac voltmeter with better than 0.25% accuracy, check the calibration of the attenuator with the vernier off (maximum ccw) and the switched decade attenuator in the 9-10 position (maximum CW). It should be within ±2% of 9 volts rms. If necessary trim fixed resistor R138B in parallel with R138A (do not disturb R138A). R138B is located on the large card PC418, as shown in Figure 3.

5.9 FREQUENCY RESPONSE

Using a suitable voltmeter, such as the Fluke Model 931P, compare the output voltage versus frequency from 10 Hz to 10 kHz, it should be within ±0.5%. The absolute voltage accuracy is not important because only changes in voltage are observed.

With the sine wave output attenuator set in the 9-10 volt position and the concentric vernier amplitude control off (maximum ccw), check the sine wave output at 400 kHz (4-0-0, X1000). It should be within ±3% of 9 volts rms. If necessary adjust trimmer capacitor C132, located as shown in Figure 3.

5.10 AMPLITUDE STABILITY

The long term amplitude stability may be monitored by using a suitable ac voltage monitor such as the Krohn-Hite Model AC-601R and a sensitive strip chart recorder. Connect the output of the Oscillator to the input of the AC monitor. Set the Oscillator frequency to 1 kHz (1-0-0, X10). Set the input voltage controls on the AC Monitor to 10 volts. Connect the output of the AC Monitor to the input of a strip chart recorder. Adjust the input voltage controls on the AC Monitor for a null on the recorder at maximum sensitivity. When using the Krohn-Hite Model AC 601R in the maximum sensitivity (0.01%) position, a 0.01% change in input voltage will produce a 0.5 millivolt dc change in the output of the monitor. With a recorder having a full scale sensitivity of 10 millivolts, changes in ac voltages of 0.001% can be observed.

5.11 HUM AND NOISE (Cycle-to-Cycle Stability)

This specification can be checked by using a Tektronix scope with a type W differential comparator type plug-in unit or equivalent. Using 1 millivolt per centimeter sensitivity, check the cycle-to-cycle peak amplitude variations with the Oscillator output at 7 volts rms. The peak variation due to hum or noise should be less than 2 mv (2 cm). The hum and noise should be observed on the peak of the waveform.

5.12 HUM MODULATION

Using the same method as above in step 5.11, check the line frequency modulation or beat at approximately 70 Hz and 140 Hz. The maximum peak excursion should be less than 1 mv (1 cm).

5.13 OUTPUT IMPEDANCE

Connect the 50 ohm output to an ac voltmeter. Adjust the output attenuator for a reading of 10 volts. Load the output with 50 ohms. The output voltage should drop to 5 volts. This check can be performed at various attenuator settings. In each case the output voltage should drop 6 db when shunted with the matched load.

5.14 EXTERNAL SYNCHRONIZATION

Connect a 1 kHz signal of 1/2 volt rms amplitude to the SYNC input connector located on the rear of the chassis. Set the Oscillator to approximately 1 kHz (1-0-0, X10). Connect the output of the Oscillator to the vertical amplifier of the scope and connect the external Oscillator to the horizontal amplifier of the scope. Set the scope up for display of a circular Lissajous pattern. The Oscillator should lock to the external signal over a range of approximately ±0.5%.

5.15 SQUARE WAVE ADJUSTMENTS

5.15.1 Symmetry

Using a wide-band oscilloscope (frequency range at least 30 MHz) connect the scope lead with a 50 ohm termination to the Square Wave output of the Oscillator. Set the Oscillator frequency to 1 kHz (1-0-0, X10). Set the square wave amplitude control full CW. While observing the square wave symmetry, adjust Potentiometer P281, located on the large card, as shown in Figure 3, for a 1% symmetrical waveform.

5.15.2 DC Level

Adjust Potentiometer P282, located on the large card, PC418, for zero dc level on the Square Wave output. This can be observed on the scope or by using a dc voltmeter connected to the square wave output terminal.

5.15.3 Rise and Fall Time

Using a 30 MHz bandwidth oscilloscope, with the sweep time calibrated for 20 nanoseconds per centimeter, measure the rise and fall time of the Square Wave at 1 MHz (9-9-9, X1000). The rise time is considered to be the horizontal displacement between the 10% and 90% points. The tolerance is less than 20 nanoseconds.

Figure 8. Push-Button Printed Circuit Cards

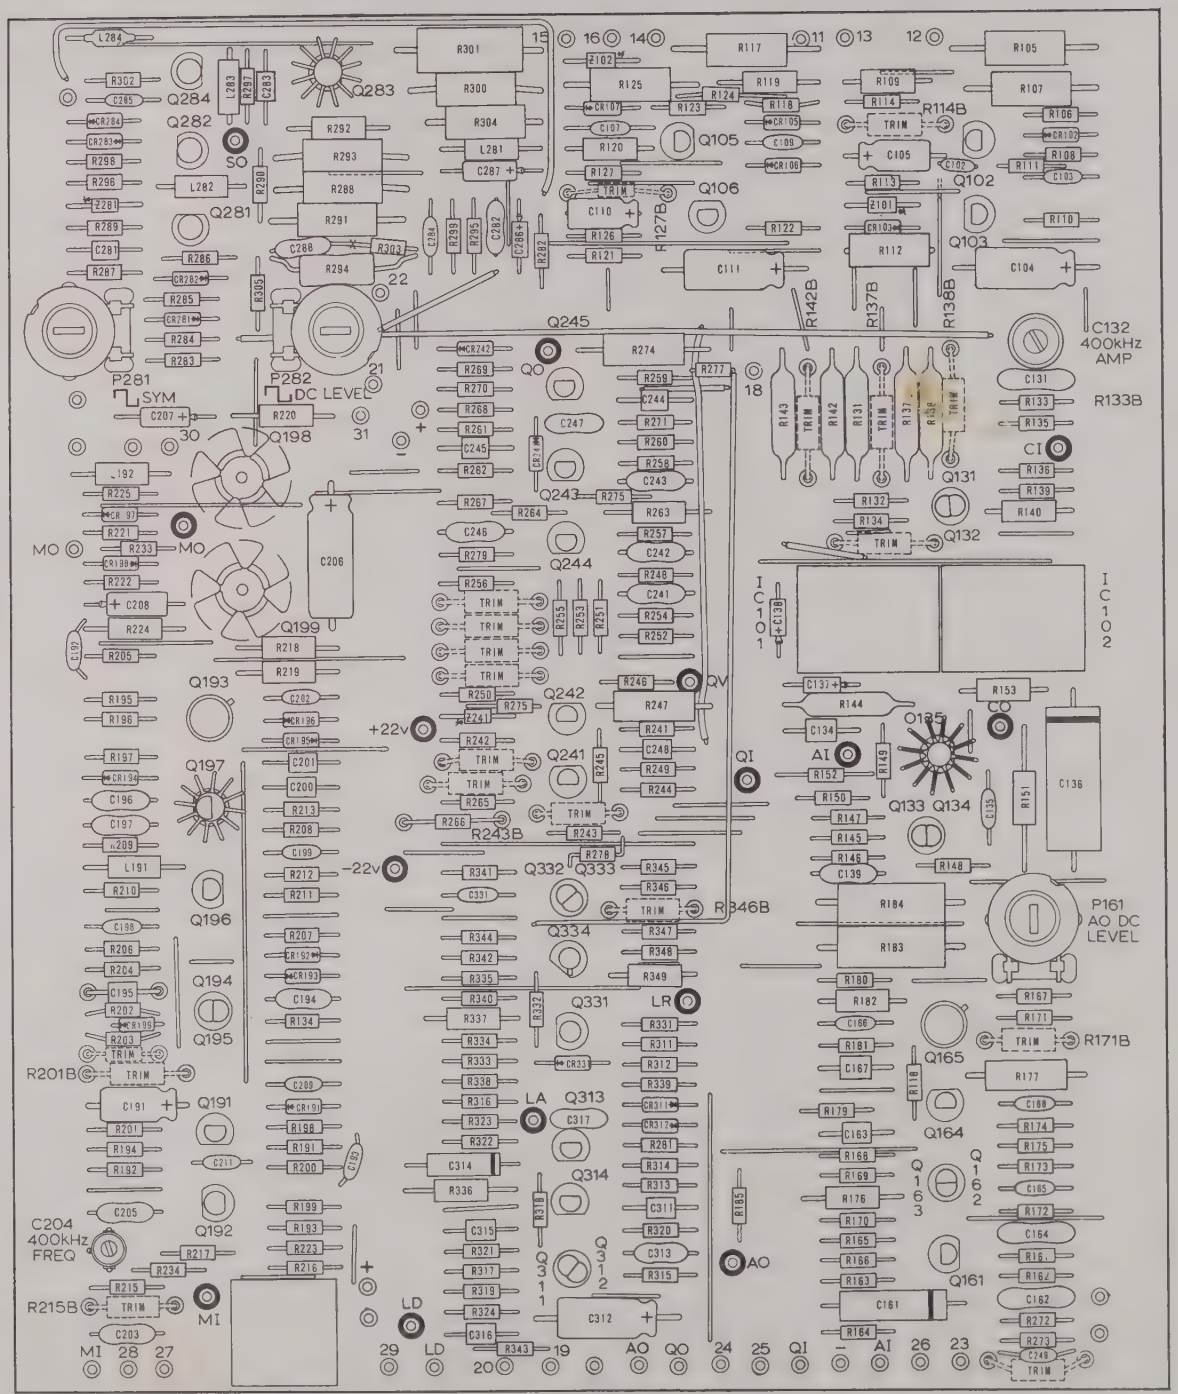
P281
SYM
P282
DC LEVEL
C204
400kHz
FREQ
C132
400kHz
AMP
P161
AO DC
LEVEL
R133B
R114B
R127B
R142B
R137B
R138B
R171B
R201B
R215B
R243B
R346B
IC101
IC102
+22v
-22v
MO
MI
SO
SI
CO
CI
AO
AI
LD
LA
LR
QO
QI
QV
Q105
Q106
Q102
Q103
Q131
Q132
Q133 Q134
Q135
Q165
Q164
Q163
Q162
Q161
Q331
Q332
Q333
Q334
Q313
Q314
Q311
Q312
Q241
Q242
Q243
Q244
Q245
Q193
Q197
Q196
Q194
Q195
Q191
Q192
Q198
Q199
Q281
Q282
Q283
Q284

PC 418

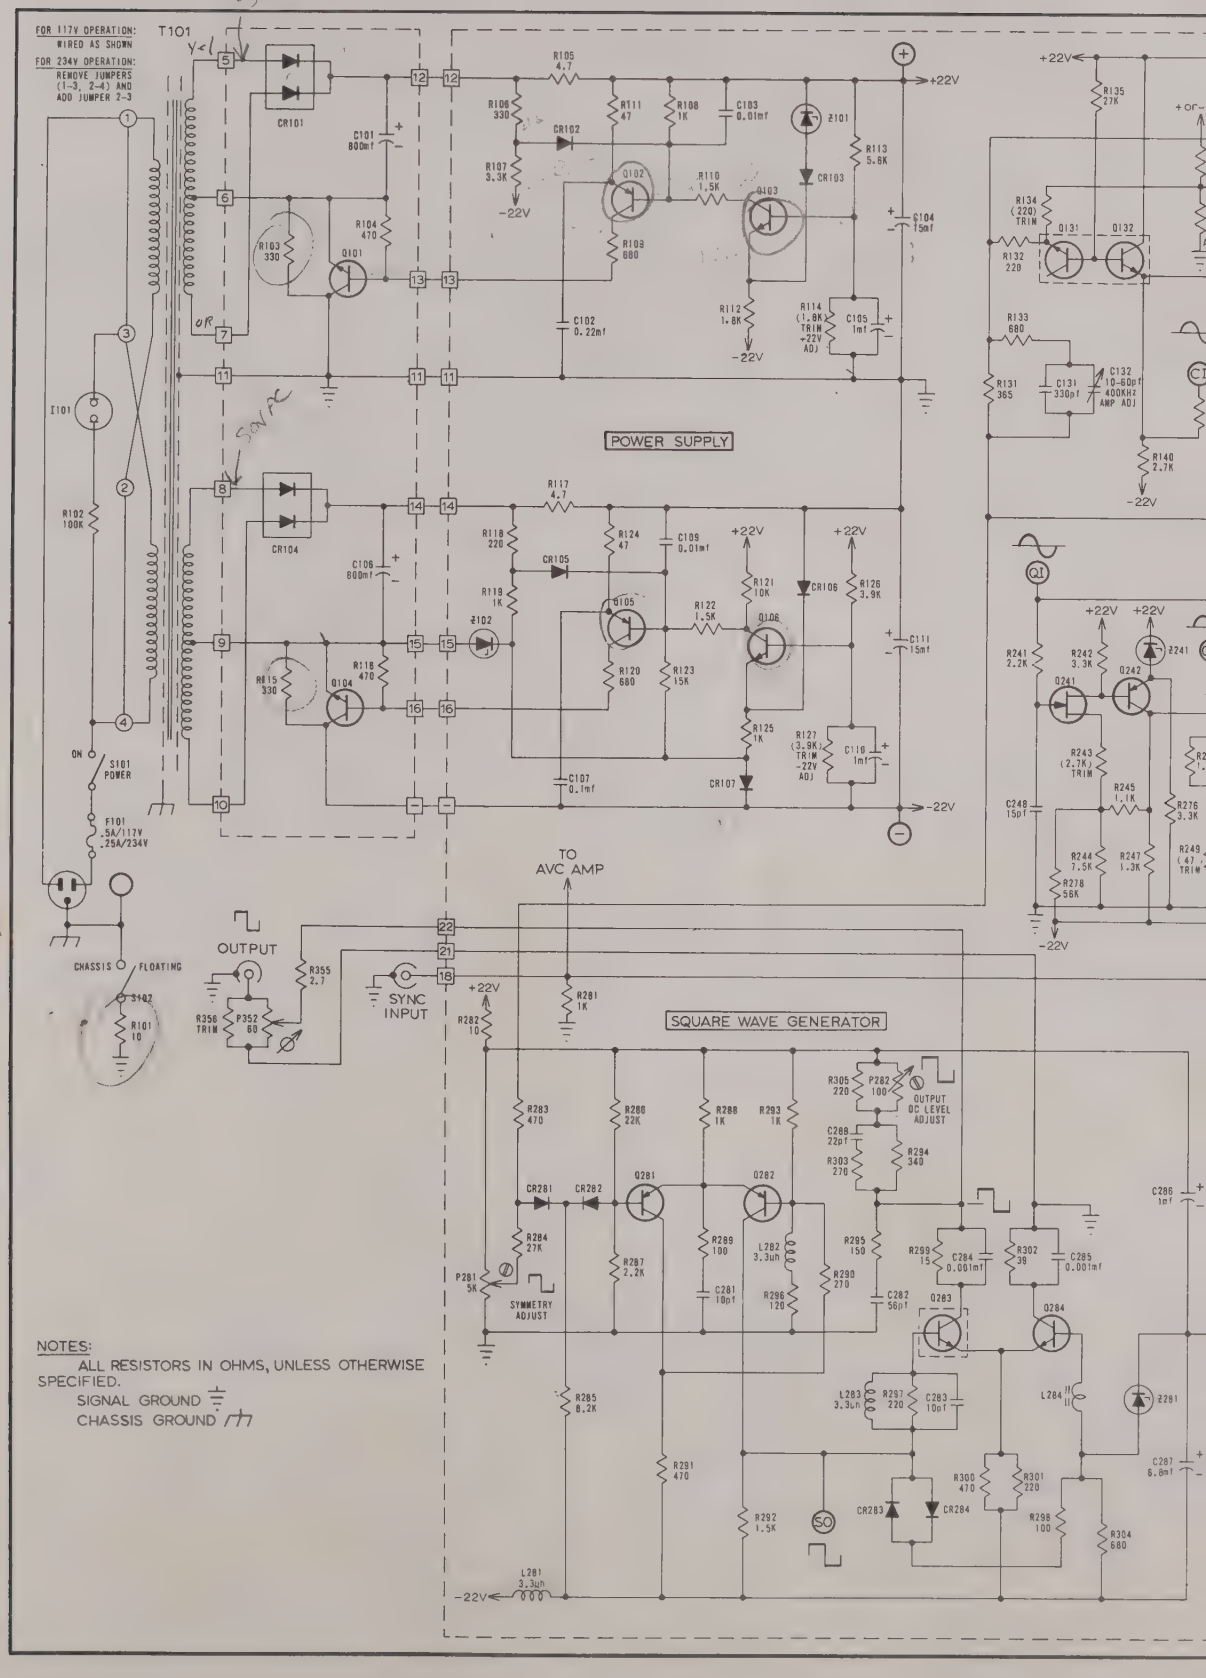

NOTES:

ALL RESISTORS IN OHMS, UNLESS OTHERWISE SPECIFIED.

SIGNAL GROUND

CHASSIS GROUND

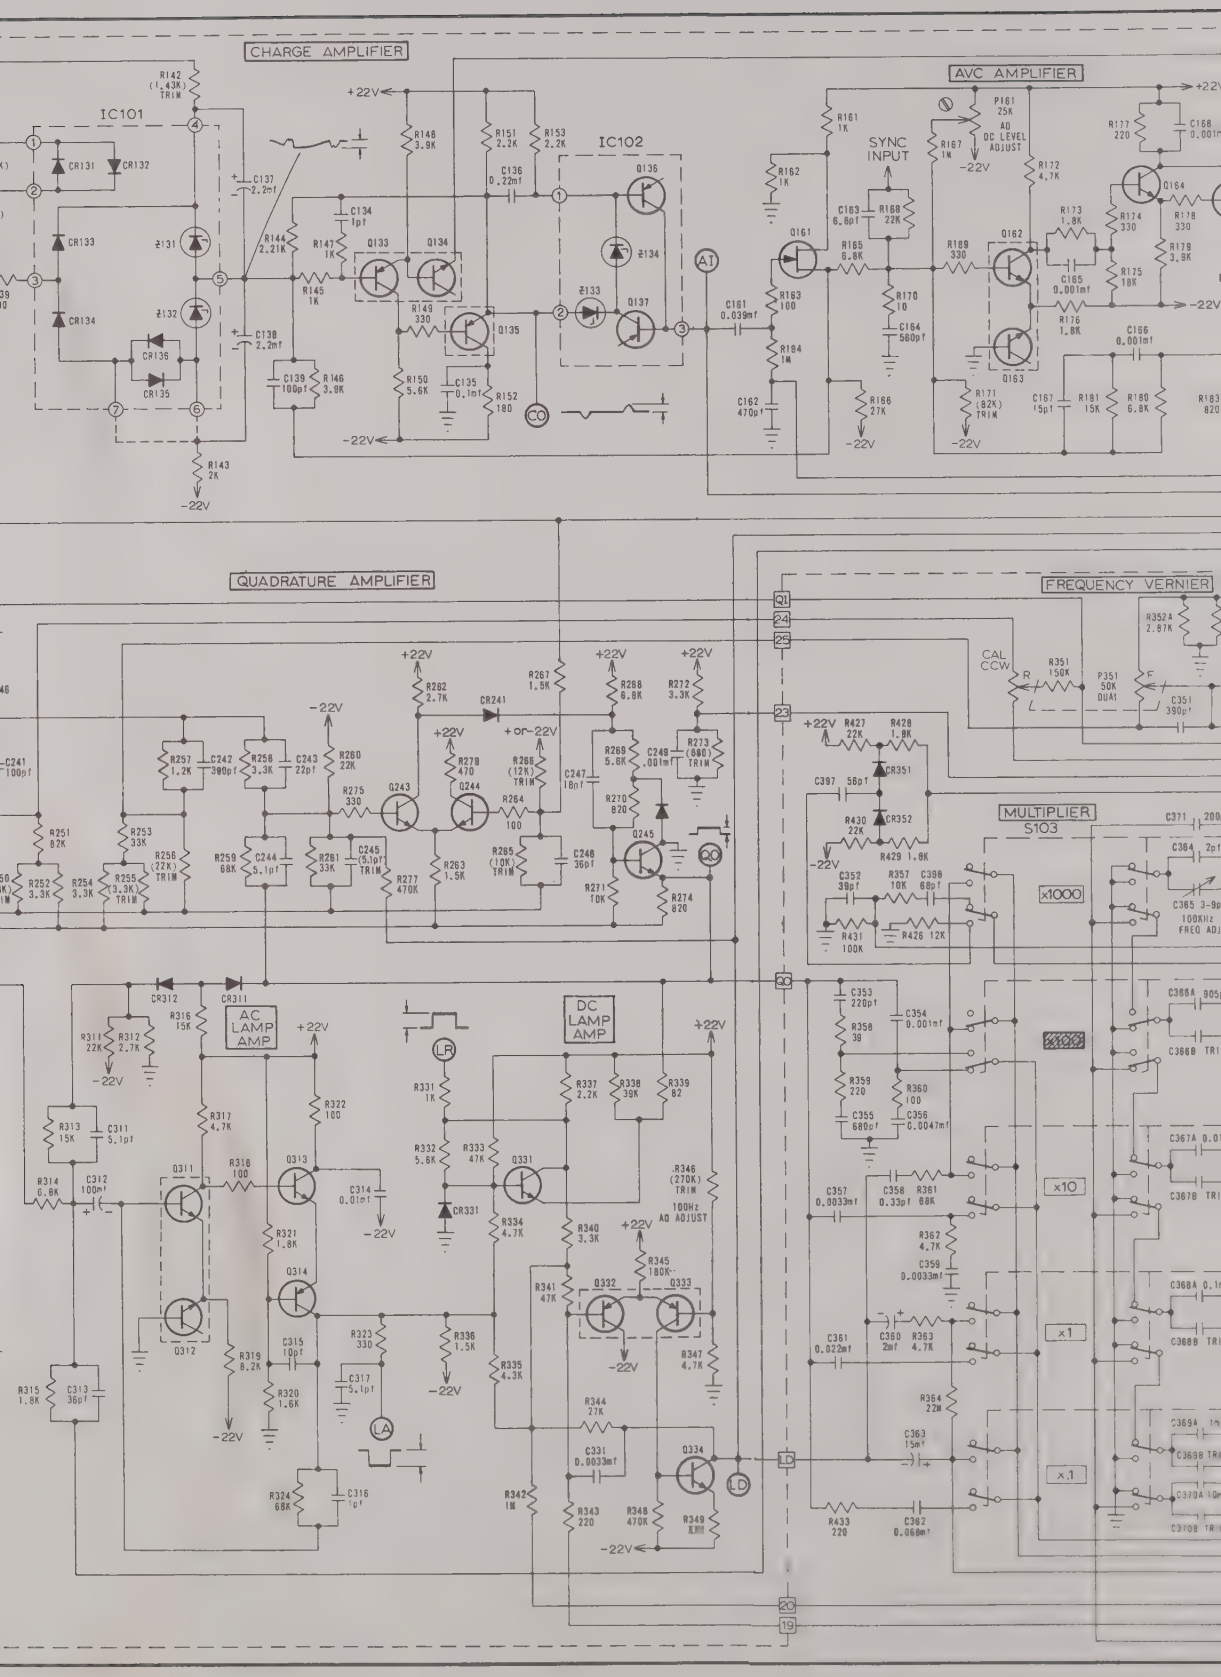
CHARGE AMPLIFIER
IC101
IC102
AVC AMPLIFIER
SYNC INPUT
AQ DC LEVEL ADJUST
QUADRATURE AMPLIFIER
FREQUENCY VERNIER
CAL CCW
MULTIPLIER S103
AC LAMP AMP
DC LAMP AMP
100Hz AQ ADJUST
+22V
-22V
x1000
x100
x10
x1
x.1

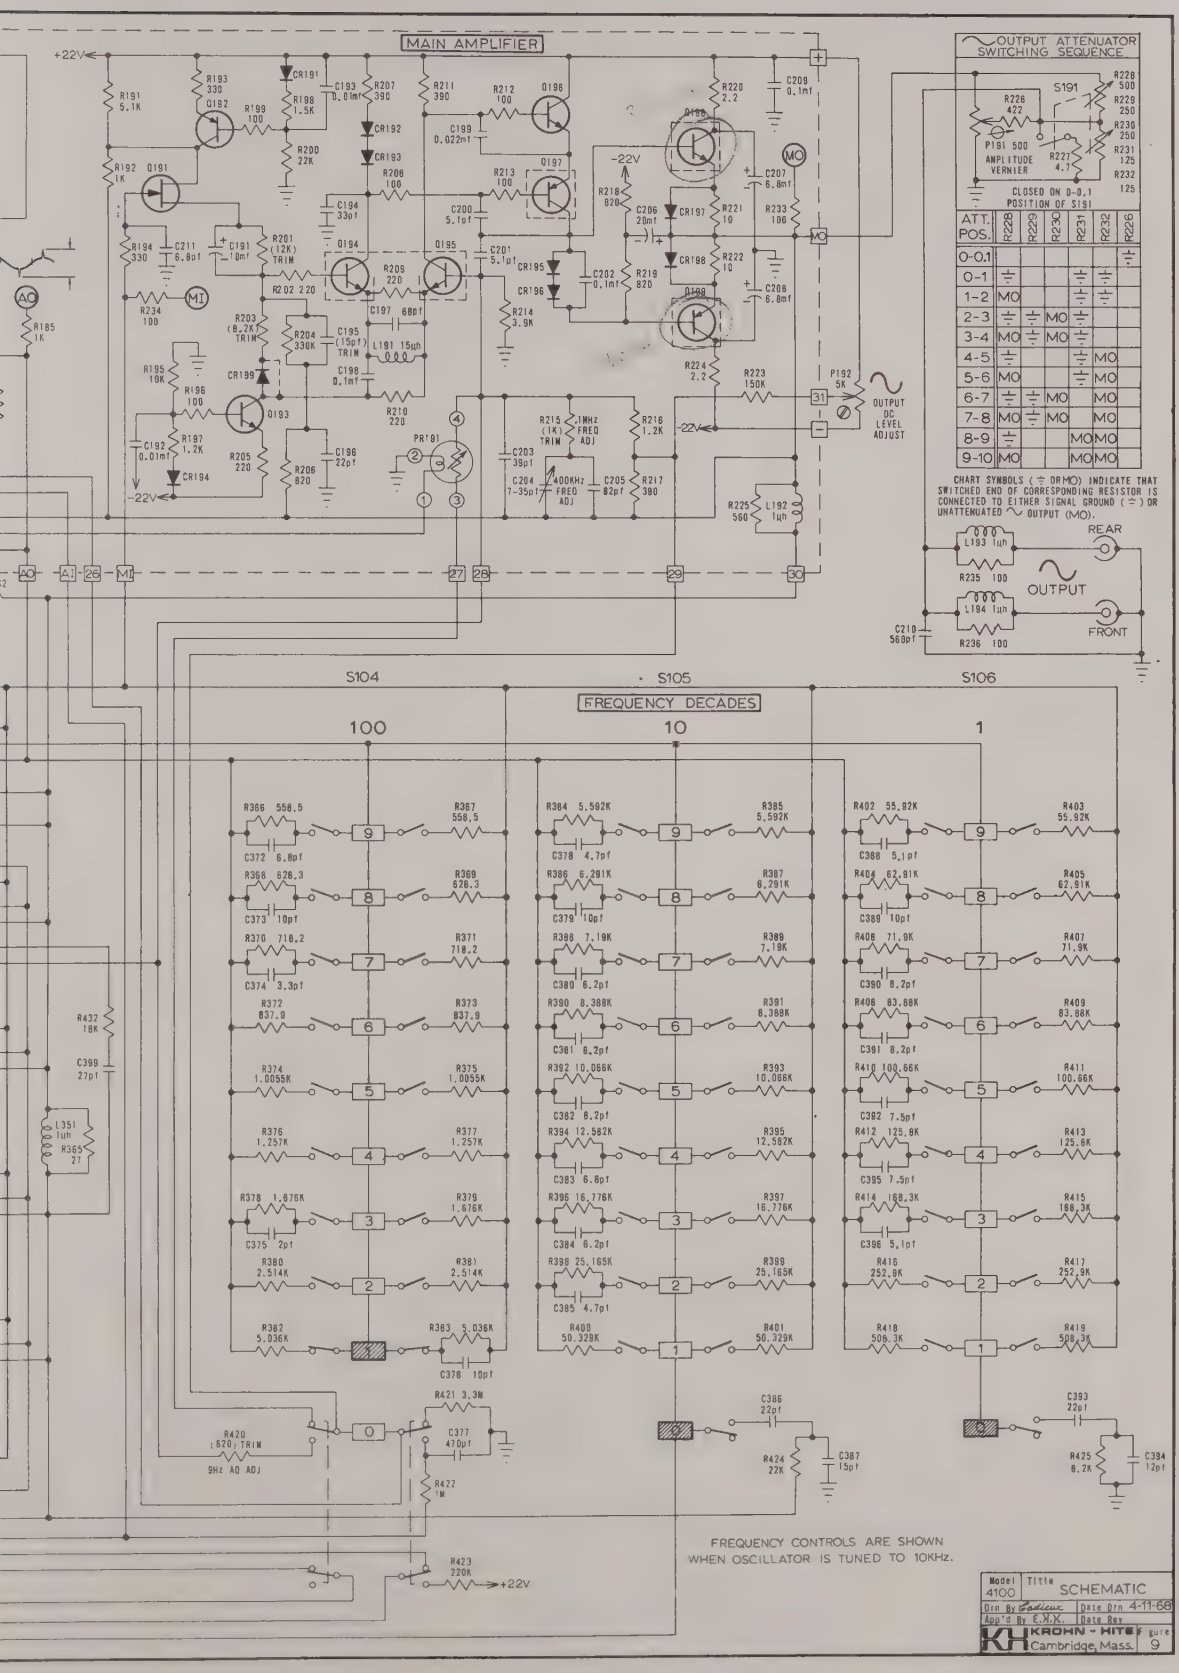
MAIN AMPLIFIER
OUTPUT ATTENUATOR SWITCHING SEQUENCE
S191
ATT. POS.
CHART SYMBOLS (÷ OR MO) INDICATE THAT SWITCHED END OF CORRESPONDING RESISTOR IS CONNECTED TO EITHER SIGNAL GROUND (÷) OR UNATTENUATED ~ OUTPUT (MO).
OUTPUT DC LEVEL ADJUST
REAR
OUTPUT
FRONT
S104
S105
S106
FREQUENCY DECADES
100
10
1
FREQUENCY CONTROLS ARE SHOWN WHEN OSCILLATOR IS TUNED TO 10KHz.
Model 4100
Title SCHEMATIC
Drn By Radicic
Date Drn 4-11-68
App'd By E.N.K.
Date App
KROHN-HITE Cambridge, Mass.
Figure 9

CAPACITORS

Symbol	Description			Mfr.	Part No.
C101	800mf	+100% -10%	50V	SP	62D
C102	0.22mf	+80% -20%	50V	ERIE	6131-050-25U-2242
C103	0.01mf	20%	100V	CD	TMD6100BX103M
C104	15mf	+75% -10%	50V	SP	30D156G050CB2
C105	1mf	+75% -10%	50V	SP	30D105G050BA2
C106	800mf	+100% -10%	50V	SP	62D
C107	0.1mf	20%	100V	CD	TMD6100BX104M
C109	0.01mf	20%	100V	CD	TMD6100BX103M
C110	1mf		25V	SP	30D105G025AA2
C111	15mf	+75% -10%	50V	SP	30D156G050CB2
C131	330pf	5%	500V	EL	DM19C331J
C132	10-60pf			TRUSH	10S-TRIKO-06-N1500
C133	150pf	10%	500V	EL	DM15C151K
C134	1pf	10%	500V	JEF	JM5-32
C135	0.1mf	20%	100V	CD	TMD6100BX104M
C136	0.22mf	10%	100V	CD	WMFIP22
C137	2.2mf	20%	15V	SP	150D225X0015A2
C138	2.2mf	20%	15V	SP	150D225X0015A2
C139	100pf	10%	500V	EL	DM15C101K
C161	0.039mf	10%	100V	CD	WMF1S39
C162	470pf	10%	500V	EL	DM19C471K
C163	6.8pf	10%	500V	JEF	JM5-32
C164	560pf	10%	500V	EL	DM19C561K
C165	0.001mf	20%	500V	SP	C023B501E102M
C166	0.001mf	20%	500V	SP	C023B501E102M
C167	15pf	20%	500V	JEF	JM3-16
C168	0.001mf	20%	500V	SP	C023B501E102M
C169	10pf	10%	500V	JEF	JM5-32
C191	10mf	+75%	6V	SP	30D106G006BA2
C192	0.01mf	-10%	100V	CD	TMD6100BX103M
C193	0.01mf	20%	100V	CD	TMD6100BX103M
C194	33pf	10%	500V	EL	DM15C330K
C195	TRIM			JEF	TYPE JM3-16
C196	22pf	10%	500V	EL	DM15C220K
C197	68pf	10%	500V	EL	DM15C680K
C198	0.1mf	20%	100V	CD	TMD6100BX104M
C199	0.022mf	20%	100V	CD	TMD6100BX223M
C200	5.1pf	10%	500V	JEF	JM5-32
C201	5.1pf	10%	500V	JEF	JM5-32
C202	0.1mf	20%	100V	CD	TMD6100BX104M
C203	39pf	10%	500V	EL	DM15C390K
C204	7-35pf			TRUSH	7-S-TRIKO-02-N1500
C205	82pf	10%	500V	EL	DM15C820K
C206	20mfd	+75% -10%	50V	SP	30D206G050BC2
C207	6.8mf	20%	35V	SP	150D685X0035B2
C208	6.8mf	20%	35V	SP	150D685X0035B2
C209	0.1mf	20%	100V	CD	TMD6100BX104M
C210	560pf	10%	500V	EL	DM19C561K
C211	6.8pf	20%	1000V	SP	C030B102E6R8M
C241	100pf	10%	500V	EL	DM15C101K
C242	390pf	10%	500V	EL	DM15C391K
C243	68pf	10%	500V	EL	DM15C680K
C244	5.1pf	10%	500V	JEF	JM5-32
C245	15pf	20%	500V	JEF	JM3-16
C246	36pf	10%	500V	EL	DM15C360K
C247	18pf	10%	500V	EL	DM15 180K
C248	8.2pf	20%	500V	JEF	JM5-32
C249	0.001mf		500V		
C281	10pf	10%	500V	JEF	JM5-32
C282	56pf	10%	500V	EL	DM15C560K
C283	10pf	10%	500V	JEF	JM5-32
C284	0.001mf	20%	500V	SP	C023B501E102M
C285	0.001mf	20%	500V	SP	C023B501E102M

Symbol	Description			Mfr.	Part No.
C286	1mf	20%	35V	SP	150D105X035A2
C287	6.8mf	20%	35V	SP	150D685X0035B2
C288	22pf	10%	500V	EL	DM15C220K
C311	5.1pf	10%	500V	JEF	JM5-32
C312	100mf	+75% -10%	3V	SP	30D107G003CB2
C313	36pf	10%	500V	EL	DM15C360K
C314	0.01mf	10%	100V	CD	WMF191
C315	10pf	10%	500V	JEF	JM5-32
C316	1pf	10%	500V	JEF	JM5-32
C317	5.1pf	10%	500V	EL	DM15C5.1K0
C331	0.0033mf	20%	500V	SP	C023B501332M
C350	4.7pf	10%	500V	JEF	JM5-32
C351	390pf	10%	500V	EL	DM15C391K
C352	39pf	10%	500V	EL	DM19C910K
C353	220pf	10%	500V	EL	DM19C221K
C354	0.001mf	10%	100V	EL	DM19C102K
C355	680pf	10%	500V	EL	DM19C681K
C356	0.0047mf	20%	500V	SP	C023B501F472M
C357	0.0033mf	20%	500V	SP	WMF 1033
C358	0.1mf	20%	100V	CD	TMD6100BX104M
C359	0.0033mf	20%	500V	SP	C023B501332M
C360	2mf	+75% -10%	15V	SP	30D205G015BA2
C361	0.022mf	10%	100V	CD	WMF1S-22
C362	0.068mf	10%	100V	CD	WMF1S-68
C363	15mf	+75% -10%	12V	SP	30D156G012BA2
C364	2pf	10%	500V	JEF	JM5-32
C365	3-9pf			TRUSH	7S-TRIKO-07-N075
C366A	905pf	1%	500V	KH	
C366B	TRIM				
C367A	0.01mf	1%	100V	KH	
C367B	TRIM				
C368A	0.1mf	+1% -3%	100V	KH	
C368B	TRIM				
C369A	1mf	+1% -3%	100V	KH	
C369B	TRIM				
C370A	10mf	+1% -3%	50V	KH	
C370B	TRIM				
C371	200pf	1%	500V	EL	DM19C201F
C372	6.8pf	10%	500V	JEF	JM5-32
C373	10pf	10%	500V	JEF	JM5-32
C374	3.3pf	10%	500V	JEF	JM5-32
C375	2pf	10%	500V	JEF	JM5-32
C376	10pf	10%	500V	JEF	JM5-32
C377	470pf	10%	500V	EL	DM19C471K
C378	4.7pf	10%	500V	JEF	JM5-32
C379	10pf	10%	500V	JEF	JM5-32
C380	6.2pf	10%	500V	JEF	JM5-32
C381	6.2pf	10%	500V	JEF	JM5-32
C382	8.2pf	20%	500V	JEF	JM5-32
C383	6.8pf	10%	500V	JEF	JM5-32
C384	6.2pf	10%	500V	JEF	JM5-32
C385	4.7pf	10%	500V	JEF	JM5-32
C386	22pf	10%	500V	EL	DM15C220K
C387	15pf	20%	500V	JEF	JM3-16
C388	5.1pf	10%	500V	JEF	JM5-32
C389	10pf	10%	500V	JEF	JM5-32
C390	8.2pf	20%	500V	JEF	JM5-32
C391	8.2pf	20%	500V	JEF	JM5-32
C392	7.5pf	10%	500V	JEF	JM5-32
C393	68pf	10%	500V	EL	DM15C680K
C394	12pf	10%	500V	JEF	JM5-32
C395	7.5pf	10%	500V	JEF	JM5-32
C396	5.1pf	10%	500V	JEF	JM5-32
C397	56pf	10%	500V	EL	DM15C560K
C398	68pf	10%	500V	EL	DM15C680K
C399	27pf	10%	500V	EL	DM15C270K

DIODES, TRANSISTORS, & MISC.

Symbol	Description	Mfr.	Part No.
CR101	Rectifier	MO	MDA940A-3
CR102	1N456	TR	1N456
CR103	1N456	TR	1N456
CR104	Rectifier	MO	MDA940A-3
CR105	1N456	TR	1N456 4805 —
CR106	1N456	TR	1N456 190272
CR107	1N456	TR	1N456
CR131	1N456	TR	1N456 FF A
CR132	1N456	TR	1N456
CR133	SG5445	TR	SG5445
CR134	SG5445	TR	SG5445
CR135	1N456	TR	1N456
CR136	1N456	TR	1N456
CR191	1N456	TR	1N456
CR192	1N456	TR	1N456
CR193	1N456	TR	1N456
CR194	1N456	TR	1N456
CR195	1N456	TR	1N456
CR196	1N456	TR	1N456
CR197	SG5445	TR	SG5445
CR198	SG5445	TR	SG5445
CR241	SG5445	TR	SG5445
CR242	SG5445	TR	SG5445
CR281	SG5445	TR	SG5445
CR282	SG5445	TR	SG5445
CR283	SG5445	TR	SG5445
CR284	SG5445	TR	SG5445
CR312	SG5445	TR	SG5445
CR351	SG5445	TR	SG5445
CR352	SG5445	TR	SG5445
Q101	40324	RCA	40324
Q102	2N4125	MO	2N4125
Q103	2N3711	TI	2N3711
Q104	40324	RCA	40324
Q105	2N4125	MO	2N4125
Q106	2N3711	TI	2N3711
Q131	MPS3394	MO	MPS3394
Q132	MPS3287	MO	MPS3287
Q133	2N4125	MO	2N4125
Q134	MPS3394	MO	MPS3394
Q135	MM2005-2	MO	MM2005-2
Q136	2N4258	FAIR	2N4258
Q137	2N4258	FAIR	2N4258
Q161	MPF102	MO	MPF102
Q162	MPS2714	MO	MPS2714
Q163	MPS3394	MO	MPS3394
Q164	MPS2714	MO	MPS2714
Q165	40315	RCA	40315
Q191	MPF102	MO	MPF102
Q192	MPS6516	MO	MPS6516
Q193	40314	RCA	40314
Q194	MPS3287	MO	MPS3287
Q195	MPS3287	MO	MPS3287
Q196	MPS3287	MO	MPS3287
Q197	MPS6516	MO	MPS6516
Q198	2N2219A	TI	2N2219A
Q199	~~2N2905~~ 2N2904	TI	2N2905
Q241	MPF102	MO	MPF102
Q242	MPS6516	MO	MPS6516
Q243	2N4123	MO	2N4123
Q244	MPS3287	MO	MPS3287
Q245	2N4124	MO	2N4124
Q281	2N4258	FAIR	2N4258
Q282	2N4258	FAIR	2N4258
Q283	2N3646	FAIR	2N3646
Q284	~~2N3642~~ 2N3646	FAIR	2N~~442~~ 2N2369
Q311	2N3711	TI	2N3711
Q312	MPS3394	MO	MPS3394
Q313	2N4123	MO	2N4123
Q314	2N4125	MO	2N4125
Q331	PET9001	PH. F	PET9001
Q332	MPS6519	MO	MPS6519
Q333	2N4125	MO	2N4125
Q334	40399	RCA	40399
F1-1	Fuse .5A/117V Slo-Blo	BUSS	MDL
	.25A/234V Slo-Blo	BUSS	MDL
L191	15 micro henry	DL	1537-40
L192	1 micro henry	DL	1537-12
L193	1 micro henry	DL	1537-12
L192	1 micro henry	DL	1537-12
L281	3.3 micro henry 10%	DL	1537-24
L282	3.3 micro henry 10%	DL	1537-24
L283	3.3 micro henry 10%	DL	1537-24
L351	1 micro henry 10%	DL	1537-24
P161	25K 30%	CLARO	SM7729
P191	500 20%	KH	B2269
P192	5K 20%	AB	JAIL040S502MC
P281	5K 30%	CLARO	RS9847
P282	100 30%	CLARO	RS9846
P351	dual 10% 50K	AB	JJ94296 Taper A2624
P352	50 10%	AB	JAIN056P600UA
PR-191	Photo Resistor	NS	PL1036-1SP #1801
S101	Power Switch	CH	8280K27H
S102	Slide Switch	CW	G123
S103	Multiplier Switch, Push-Button	IEE	5XE20-6U-6R
S104	Decade Switch, Push-Button	IEE	10XE10-2U-6R
S105	Decade Switch, Push-Button	IEE	10XE10-2U-6R
S106	Decade Switch, Push-Button	IEE	10XE10-2U-6R
S191	Switch Attenuator	CTS	B2269 ReV E
T101	Power Transformer	KH	P-100-91b
Z101	LMZX 18	SM	LMZX18
Z102	LMZX 18	SM	LMZX18
Z131	Z0877	SM	Z0877
Z132	Z0877	SM	Z0877
Z133	LMZX5.6	SM	LMZX5.6
Z134	LMZX6.8	SM	LMZX6.8
Z241	LMZX3.3	SM	LMZX3.3
Z281	LMZX5.6	SM	LMZX5.6

MANUFACTURERS CODE

AB	(01121)	Allen-Bradley Co.	Milwaukee, Wis.
BUSS	(71400)	Bussman Mfg. Div.	St. Louis, Mo.
CD	(88419)	Cornell-Dubilier Elec.	Newark, N. J.
CH	(15605)	Cutler Hammer Inc.	Milwaukee, Wis.
CTS	(71450)	CTS Corp.	Elkhart, Ind.
CW	(79727)	Continental-Wirt Elec.	Philadelphia, Pa.
DL	(99800)	Delevan Electronics	East Aurora, N. Y.
EL	(72136)	Electro Motive Mfg. Inc.	Willimantic, Conn.
ERIE		Erie Products Inc.	Erie, Pa.
FAIR	(07263)	Fairchild Semiconductor	San Rafael, Calif.
IEE		International Electro Exchange	Minneapolis, Minn.
IRC	(12400)	International Resistance Co.	Philadelphia, Pa.
JEF	(82142)	Jeffers Div. Aireco	DuBois, Pa.
KH	(88865)	Krohn-Hite Corp.	Cambridge, Mass.
MO	(04713)	Motorola Semiconductor	Phoenix, Ariz.
NS	(36462)	National Semiconductor	Montreal, Canada
PH. F		Philco-Ford	Santa Clara, Calif.
RCA	(49671)	Radio Corp. of America	Harrison, N. J.
SM	(06751)	U. S. Semcor	Phoenix, Ariz.
SP	(56289)	Sprague Electric Co.	North Adams, Mass.
TEL. L	(94322)	Tel-Labs.	Manchester, N. H.
TI	(01295)	Texas Instruments, Inc.	Dallas, Texas
TR	(03877)	Transitron Electric Co.	Wakefield, Mass.
TRUSH		Stetter-Trush	Cazenovia, N. Y.

RESISTORS

Symbol	Description			Mfr.	Part No.
R101	10	10%	1/2W	AB	EB1001
R102	100K	10%	1/4W	AB	CB1041
R103	330	10%	1W	AB	GB3311
R104	470	10%	1/4W	AB	CB4711
R105	4.7	10%	2W	IRC	BWH
R106	330	10%	1/4W	AB	CB3311
R107	3.3K	10%	1W	AB	GB3321
R108	1K	10%	1/4W	AB	CB1021
R109	680	10%	1/2W	AB	EB6811
R110	1.5K	10%	1/4W	AB	CB1521
R111	47	10%	1/4W	AB	CB4701
R112	1.8K	10%	1W	AB	GB1821
R113	5.6K	5%	1/4W	AB	CB5625
R114	TRIM	10%	1/4W	AB	TYPE CB
R115	330	10%	1W	AB	GB3311
R116	470	10%	1/4W	AB	CB4711
R117	4.7	10%	2W	IRC	BWH
R118	220	10%	1/4W	AB	CB2211
R119	1K	10%	1/4W	AB	CB1021
R120	680	10%	1/2W	AB	EB6811
R121	10K	10%	1/4W	AB	CB1031
R122	1.5K	10%	1/4W	AB	CB1521
R123	15K	10%	1/4W	AB	CB1531
R124	47	10%	1/4W	AB	CB4701
R125	1K	10%	1W	AB	GB1021
R126	3.9K	5%	1/4W	AB	CB3925
R127	TRIM	5%	1/4W	AB	TYPE CB
R131	365	1%	1/2W	IRC	CEC-TO
R132	220	10%	1/4W	AB	CB2211
R133	1K	10%	1/4W	AB	CB1021
R134	TRIM	10%	1/4W	AB	TYPE CB
R135	27K	10%	1/4W	AB	CB2731
R136	1K	10%	1/4W	AB	CB1021
R137	TRIM	1%	1/2W	IRC	CEC-TO
R138	TRIM	1%	1/2W	IRC	CEC-TO
R139	330	10%	1/4W	AB	CB3311
R140	2.7K	10%	1/2W	AB	EB2721
R142	TRIM	1%	1/2W	IRC	CEC-TO
R143	2K	1%	1/2W	IRC	CEC-TO
R144	2.21K	1%	1/2W	IRC	CEC-TO
R145	1K	10%	1/4W	AB	CB1021
R146	3.9K	10%	1/4W	AB	CB3921
R147	1K	10%	1/4W	AB	CB1021
R148	3.9K	10%	1/4W	AB	CB3921
R149	330	10%	1/4W	AB	CB3311
R150	5.6K	10%	1/4W	AB	CB5621
R151	2.2K	10%	1/2W	AB	EB2221
R152	180	10%	1/4W	AB	CB1811
R153	2.2K	10%	1/2W	AB	EB2221
R161	1K	10%	1/4W	AB	CB1021
R162	1K	10%	1/4W	AB	CB1021
R163	100	10%	1/4W	AB	CB1011
R164	1M	10%	1/4W	AB	CB1051
R165	6.8K	10%	1/4W	AB	CB6821
R166	27K	10%	1/4W	AB	CB2731
R167	1M	10%	1/4W	AB	CB1051
R168	22K	10%	1/4W	AB	CB2231
R169	330	10%	1/4W	AB	CB3311
R170	10	10%	1/4W	AB	CB1001
R171	TRIM	10%	1/4W	AB	TYPE CB
R172	4.7K	10%	1/4W	AB	CB4721
R173	1.8K	10%	1/4W	AB	CB1821
R174	330	10%	1/4W	AB	CB3311
R175	18K	10%	1/4W	AB	CB1831
R176	1.8K	10%	1/2W	AB	EB1821
R177	220	10%	1W	AB	GB2211
R178	330	10%	1/4W	AB	CB3311
R179	3.9K	10%	1/4W	AB	CB3921
R180	6.8K	10%	1/4W	AB	CB6821
R181	15K	10%	1/4W	AB	CB1531
R182	1	10%	1/2W	AB	EB10G1
R183	820	10%	2W	AB	HB8211
R184	820	10%	2W	AB	HB8211
R185	1K	10%	1/4W	AB	CB1021
R191	5.1K	5%	1/4W	AB	CB5125
R192	1K	10%	1/4W	AB	CB1021
R193	330	10%	1/4W	AB	CB3311
R194	330	10%	1/4W	AB	CB3311
R195	10K	10%	1/4W	AB	CB1031
R196	100	10%	1/4W	AB	CB1011
R197	1.2K	10%	1/4W	AB	CB1221
R198	1.5K	10%	1/4W	AB	CB1521
R199	100	10%	1/4W	AB	CB1011
R200	22K	10%	1/4W	AB	CB2231
R201	TRIM	10%	1/4W	AB	TYPE CB
R202	220	10%	1/4W	AB	CB2211
R203	TRIM	10%	1/4W	AB	TYPE CB
R204	330K	10%	1/4W	AB	CB3341
R205	220	10%	1/4W	AB	CB2211
R206	820	10%	1/4W	AB	CB8211
R207	390	10%	1/4W	AB	CB3911
R208	100	10%	1/4W	AB	CB1011
R209	220	10%	1/4W	AB	CB2211
R210	220	10%	1/4W	AB	CB2211
R211	390	10%	1/4W	AB	CB3911
R212	100	10%	1/4W	AB	CB1011
R213	100	10%	1/4W	AB	CB1011
R214	2.9K	5%	1/4W	AB	CB3925
R215	TRIM	10%	1/2W	AB	TYPE CB
R216	1.2K	10%	1/4W	AB	CB1221
R217	390	10%	1/4W	AB	CB3911
R218	820	10%	1/2W	AB	EB8211
R219	820	10%	1/2W	AB	EB8211
R220	2.2	10%	1/2W	AB	EB22G1
R221	10	10%	1/4W	AB	CB1001
R222	10	10%	1/4W	AB	CB1001
R223	150K	10%	1/4W	AB	CB1541
R224	2.2	10%	1/2W	AB	EB22G1
R225	560	10%	1/4W	AB	CB5611
R226	422	1%	1W	IRC	AS-1
R227	4.7	10%	1/2W	AB	EB47G1
R228	500	1%	1W	IRC	AS-1
R229	250	1%	1W	IRC	AS-1
R230	250	1%	1W	IRC	AS-1
R231	125	1%	1W	IRC	AS-1
R232	125	1%	1W	IRC	AS-1
R233	100	10%	1/4W	AB	CB1011
R234	100	10%	1/4W	AB	CB1011
R235	100	10%	1/4W	AB	CB1011
R241	2.2K	10%	1/4W	AB	CB2221
R242	3.3K	10%	1/4W	AB	CB3321
R243	TRIM	10%	1/4W	AB	TYPE CB
R244	7.5K	5%	1/4W	AB	CB7525
R245	1.1K	5%	1/4W	AB	CB1125
R246	1K	10%	1/4W	AB	CB1021
R247	1.3K	5%	1W	AB	GB1325
R248	1.8K	10%	1/2W	AB	EB1821
R249	TRIM	10%	1/4W	AB	TYPE CB
R250	TRIM	10%	1/4W	AB	TYPE CB
R251	82K	10%	1/4W	AB	CB8231
R252	3.3K	10%	1/4W	AB	CB3321
R253	33K	10%	1/4W	AB	CB3331
R254	TRIM	10%	1/4W	AB	TYPE CB
R255	TRIM	10%	1/4W	AB	TYPE CB
R256	22K	10%	1/4W	AB	CB2231
R257	1.2K	10%	1/4W	AB	CB1221
R258	3.3K	10%	1/4W	AB	CB3321
R259	68K	10%	1/4W	AB	CB6831
R260	22K	10%	1/4W	AB	CB2231
R261	33K	10%	1/4W	AB	CB3331
R262	2.7K	10%	1/4W	AB	CB2721
R263	1.5K	10%	1/2W	AB	EB1521
R264	100	10%	1/4W	AB	CB1011
R265	TRIM	10%	1/4W	AB	TYPE CB
R266	TRIM	10%	1/4W	AB	TYPE CB
R267	1.5K	10%	1/4W	AB	CB1521
R268	6.8K	10%	1/4W	AB	CB6821
R269	5.6K	10%	1/4W	AB	CB5621
R270	820	10%	1/4W	AB	CB8211
R271	10K	5%	1/4W	AB	CB1035
R272	3.3K	10%	1/4W	AB	CB3321
R273	TRIM	10%	1/4W	AB	TYPE CB
R274	820	10%	1W	AB	GB8211
R275	330	10%	1/4W	AB	CB3311
R276	3.3K	10%	1/4W	AB	CB3321
R277	470K	10%	1/4W	AB	CB4741
R278	56K	10%	1/4W	AB	CB5631
R281	1K	10%	1/4W	AB	CB1021

RESISTORS (Cont.)

Symbol	Description			Mfr.	Part No.
R282	10	10%	1/4W	AB	CB1001
R283	470	10%	1/4W	AB	CB4711
R284	2.21K	1%	1/2W	IRC	CEC-TO
R285	8.2K	10%	1/4W	AB	CB8221
R286	22K	10%	1/4W	AB	CB2231
R287	2.2K	10%	1/2W	AB	CB2221
R288	1K	10%	1W	AB	GB1021
R289	100	10%	1/4W	AB	CB1011
R290	270	10%	1/4W	AB	CB2711
R291	470	10%	1W	AB	GB4711
R292	1.5K	10%	1/2W	AE	EB1521
R293	1K	10%	1W	AB	GB1021
R294	340	1%	3W	TEL. L	EL 3
R295	150	10%	1/4W	AB	CB1511
R296	120	10%	1/4W	AB	CB1211
R297	220	10%	1/4W	AB	CB2211
R298	100	10%	1/4W	AB	CB1011
R299	15	10%	1/4W	AB	CB1501
R300	470	10%	1W	AB	GB4711
R301	220	10%	2W	AB	HB2211
R302	39	10%	1/4W	AB	CB3901
R303	270	10%	1/4W	AB	CB2711
R304	680	10%	1W	AB	GB6811
R305	220	10%	1/4W	AB	CB2211
R311	22K	10%	1/4W	AB	CB2231
R312	2.7K	10%	1/4W	AB	CB2721
R313	15K	10%	1/4W	AB	CB1531
R314	6.8K	10%	1/4W	AB	CB6821
R315	1.8K	10%	1/4W	AB	CB1821
R316	15K	10%	1/4W	AB	CB1531
R317	4.7K	10%	1/4W	AB	CB4721
R318	100	10%	1/4W	AB	CB1011
R319	8.2K	10%	1/4W	AB	CB8221
R320	1.6K	5%	1/4W	AB	CB1625
R321	1.8K	10%	1/4W	AB	CB1821
R322	100	10%	1/4W	AB	CB1011
R323	330	10%	1/4W	AB	CB3311
R324	68K	10%	1/4W	AB	CB6831
R331	1K	10%	1/4W	AB	CB1021
R332	5.6K	10%	1/4W	AB	CB5621
R333	47K	10%	1/4W	AB	CB4731
R334	4.7K	10%	1/4W	AB	CB4721
R335	4.3K	5%	1/4W	AB	CB4325
R336	1.5K	10%	1/2W	AB	EB1521
R337	2.2K	10%	1/2W	AB	EB2221
R338	39K	10%	1/4W	AB	CB3931
R229	82	10%	1/4W	AB	CB8201
R340	3.3K	10%	1/4W	AB	CB3321
R341	47K	10%	1/4W	AB	CB4731
R342	1M	10%	1/4W	AB	CB1051
R343	220	10%	1/4W	AB	CB2211
R344	27K	10%	1/4W	AB	CB2731
R345	180K	10%	1/4W	AB	CB1841
R346	TRIM	10%	1/4W	AB	TYPE CB
R347	4.7K	10%	1/4W	AB	CB4721
R348	470K	10%	1/4W	AB	CB4741
R349	680	10%	1/2W	AB	EB6811
R351	150K	10%	1/4W	AB	CB1541
R352A	2.87K	1%	1/2W	IRC	CEC-TO
R352B	TRIM	10%	1/4W	AB	TYPE CB
R353	562	1%	1/2W	IRC	CEC-TO
R354	300K	5%	1/4W	AB	CB3045
R355	2.7	10%	1/4W	AB	CB27G1
R356	TRIM				
R357	10K	10%	1/4W	AB	CB1031
R358	39	10%	1/4W	AB	CB3901
R359	220	10%	1/4W	AB	CB2211
R360	100	10%	1/4W	AB	CB1011
R361	68K	10%	1/4W	AB	CB6831
R362	4.7K	10%	1/4W	AB	CB4721
R363	4.7K	10%	1/4W	AB	CB4721

Symbol	Description			Mfr.	Part No.
R364	22M	10%	1/4W	AB	CB2261
R365	27	10%	1/4W	AB	CB2701
R366	558.5	1/2%	1/8W	IRC	CEA-TO
R367	558.5	1/2%	1/8W	IRC	CEA-TO
R368	628.3	1/2%	1/8W	IRC	CEA-TO
R369	628.3	1/2%	1/8W	IRC	CEA-TO
R370	718.2	1/2%	1/8W	IRC	CEA-TO
R371	718.2	1/2%	1/8W	IRC	CEA-TO
R372	837.9	1/2%	1/8W	IRC	CEA-TO
R373	837.9	1/2%	1/8W	IRC	CEA-TO
R374	1005.5	1/2%	1/8W	IRC	CEA-TO
R375	1005.5	1/2%	1/8W	IRC	CEA-TO
R376	1257.0	1/2%	1/8W	IRC	CEA-TO
R377	1257.0	1/2%	1/8W	IRC	CEA-TO
R378	1676.0	1/2%	1/8W	IRC	CEA-TO
R379	1676.0	1/2%	1/8W	IRC	CEA-TO
R380	2514.0	1/2%	1/8W	IRC	CEA-TO
R381	2514.0	1/2%	1/8W	IRC	CEA-TO
R382	5036.0	1/2%	1/8W	IRC	CEA-TO
R383	5036.0	1/2%	1/8W	IRC	CEA-TO
R384	5592	1/2%	1/8W	IRC	CEA-TO
R385	5592	1/2%	1/8W	IRC	CEA-TO
R386	6291	1/2%	1/8W	IRC	CEA-TO
R387	6291	1/2%	1/8W	IRC	CEA-TO
R388	7190	1/2%	1/8W	IRC	CEA-TO
R389	7190	1/2%	1/8W	IRC	CEA-TO
R390	8388	1/2%	1/8W	IRC	CEA-TO
R391	8388	1/2%	1/8W	IRC	CEA-TO
R392	10.066K	1/2%	1/8W	IRC	CEA-TO
R393	10.066K	1/2%	1/8W	IRC	CEA-TO
R394	12.582K	1/2%	1/8W	IRC	CEA-TO
R395	12.582K	1/2%	1/8W	IRC	CEA-TO
R396	16.776K	1/2%	1/8W	IRC	CEA-TO
R397	16.776K	1/2%	1/8W	IRC	CEA-TO
R398	25.165K	1/2%	1/8W	IRC	CEA-TO
R399	25.165K	1/2%	1/8W	IRC	CEA-TO
R400	50.329K	1/2%	1/8W	IRC	CEA-TO
R401	50.329K	1/2%	1/8W	IRC	CEA-TO
R402	55.92K	1/2%	1/8W	IRC	CEA-TO
R403	55.92K	1/2%	1/8W	IRC	CEA-TO
R404	62.91K	1/2%	1/8W	IRC	CEA-TO
R405	62.91K	1/2%	1/8W	IRC	CEA-TO
R406	71.9K	1/2%	1/8W	IRC	CEA-TO
R407	71.9K	1/2%	1/8W	IRC	CEA-TO
R408	83.88K	1/2%	1/8W	IRC	CEA-TO
R409	83.88K	1/2%	1/8W	IRC	CEA-TO
R410	100.66K	1/2%	1/8W	IRC	CEA-TO
R411	100.66K	1/2%	1/8W	IRC	CEA-TO
R412	125.8K	1/2%	1/8W	IRC	CEA-TO
R413	125.8K	1/2%	1/8W	IRC	CEA-TO
R414	168.3K	1/2%	1/8W	IRC	CEA-TO
R415	168.3K	1/2%	1/8W	IRC	CEA-TO
R416	252.9K	1/2%	1/8W	IRC	CEA-TO
R417	252.9K	1/2%	1/8W	IRC	CEA-TO
R418	508.3K	1/2%	1/4W	IRC	CEB-TO
R419	508.3K	1/2%	1/4W	IRC	CEB-TO
R420	TRIM	5%	1/4W	AB	TYPE CB
R421	3.3M	10%	1/4W	AB	CB3351
R422	1M	10%	1/4W	AB	CB1051
R423	220K	10%	1/4W	AB	CB2241
R424	22K	10%	1/4W	AB	CB2231
R425	8.2K	10%	1/4W	AB	CB8221
R426	12K	10%	1/4W	AB	CB1231
R427	22K	10%	1/4W	AB	CB2241
R428	1.8K	10%	1/4W	AB	CB1821
R429	1.8K	10%	1/4W	AB	CB1821
R430	22K	10%	1/4W	AB	CB2241
R431	100K	10%	1/4W	AB	CB1041
R432	18K	10%	1/4W	AB	CB1831
R433	220	10%	1/4W	AB	CB2211

1N4002
1A 100PIV Silicon diode
JF 393491

RECTIFIER ASSEMBLIES

Type	Material	Ref.	V_{RRM} Volts	I_{FSM} Amp	I_{FRM} Amp	I_O Amp	@ °C
MDA920-1	S	MDA920	25	32	5.0	1.0	75
MDA920-2	S	MDA920	50	32	5.0	1.0	75
MDA920-3	S	MDA920	100	32	5.0	1.0	75
MDA920-4	S	MDA920	200	32	5.0	1.0	75
MDA920-5	S	MDA920	300	32	5.0	1.0	75
MDA920-6	S	MDA920	400	32	5.0	1.0	75
MDA920-7	S	MDA920	600	32	5.0	1.0	75
MDA922-1	S	MDA922-1	25	60		1.8	55
MDA922-2	S	MDA922-1	50	60		1.8	55
MDA922-3	S	MDA922-1	100	60		1.8	55
MDA922-4	S	MDA922-1	200	60		1.8	55
MDA922-5	S	MDA922-1	300	60		1.8	55
MDA922-6	S	MDA922-1	400	60		1.8	55
MDA922-7	S	MDA922-1	600	60		1.8	55
MDA922-8	S	MDA922-1	800	60		1.8	55
MDA922-9	S	MDA922-1	1000	60		1.8	55
MDA930-1	S	MDA920	25	32	5.0	0.5	75
MDA930-2	S	MDA920	50	32	5.0	0.5	75
MDA930-3	S	MDA920	100	32	5.0	0.5	75
MDA930-4	S	MDA920	200	32	5.0	0.5	75
MDA930-5	S	MDA920	300	32	5.0	0.5	75
MDA930-6	S	MDA920	400	32	5.0	0.5	75
MDA930-7	S	MDA920	600	32	5.0	0.5	75
MDA940-1	S	MDA920	25	32	5.0	1.0	75
MDA940-2	S	MDA920	50	32	5.0	1.0	75
MDA940-3	S	MDA920	100	32	5.0	1.0	75
MDA940-4	S	MDA920	200	32	5.0	1.0	75
MDA940-5	S	MDA920	300	32	5.0	1.0	75
MDA940-6	S	MDA920	400	32	5.0	1.0	75
MDA940-7	S	MDA920	600	32	5.0	1.0	75
MDA942-1	S	MDA942	50	25	6.0	1.5	55
MDA942-2	S	MDA942	100	25	6.0	1.5	55
MDA942-3	S	MDA942	200	25	6.0	1.5	55
MDA942-4	S	MDA942	300	25	6.0	1.5	55
MDA942-5	S	MDA942	400	25	6.0	1.5	55
MDA942-6	S	MDA942	600	25	6.0	1.5	55
MDA950-1	S	MDA920	25	32	5.0	1.0	75
MDA950-2	S	MDA920	50	32	5.0	1.0	75
MDA950-3	S	MDA920	100	32	5.0	1.0	75
MDA950-4	S	MDA920	200	32	5.0	1.0	75
MDA950-5	S	MDA920	300	32	5.0	1.0	75
MDA950-6	S	MDA920	400	32	5.0	1.0	75
MDA950-7	S	MDA920	600	32	5.0	1.0	75
MDA952-1	S	MDA942	50	150	35	6.0	55
MDA952-2	S	MDA942	100	150	35	6.0	55
MDA952-3	S	MDA942	200	150	35	6.0	55
MDA952-4	S	MDA942	300	150	35	6.0	55
MDA952-5	S	MDA942	400	150	35	6.0	55
MDA952-6	S	MDA942	600	150	35	6.0	55
MDA952FR-1	S	MDA952FR-1	50	150		6.0	55

Type
MDA952FR-2
MDA952FR-3
MDA952FR-4
MDA952FR-5
MDA960-1
MDA960-2
MDA960-3
MDA962-1
MDA962-2
MDA962-3
MDA962-4
MDA962-5
MDA970-1
MDA970-2
MDA970-3
MDA972-1
MDA972-2
MDA972-3
MDA972-4
MDA972-5
MDA980-1
MDA980-2
MDA980-3
MDA980-4
MDA980-5
MDA980-6
MDA990-1
MDA990-2
MDA990-3
MDA990-4
MDA990-5
MDA990-6
MDA1330H
MDA1331H
MDA1332H
MDA1333H
MDA1491-1
MDA1491-2
MDA1491-3
MDA1491-4
MDA1491-5
MDA1491-6
MDA1505-1
MDA1505-2
MDA1505-3
MDA1505-4
MDA1505-5
MDA1505-6
MDA1591-1
MDA1591-2
MDA1591-3
MDA1591-4
MDA1591-5
MDA1591-6

www.manualsplus.com
1037517

KROHN-HITE
CORPORATION

PRINTED IN U.S.A.